


On Off Buttom




Microphone Interface

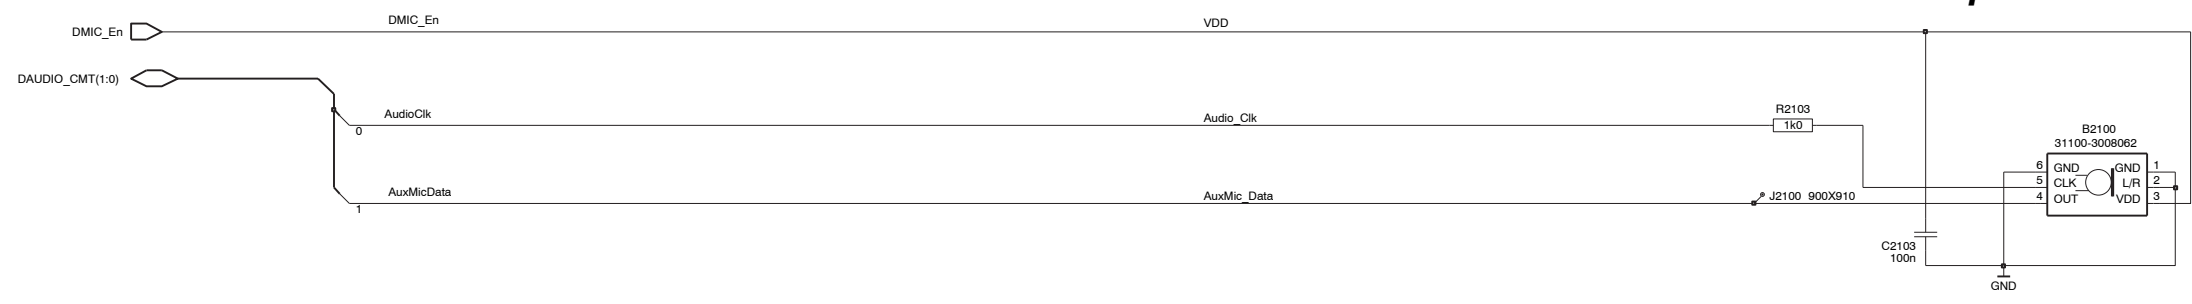



Microphone


Vibra

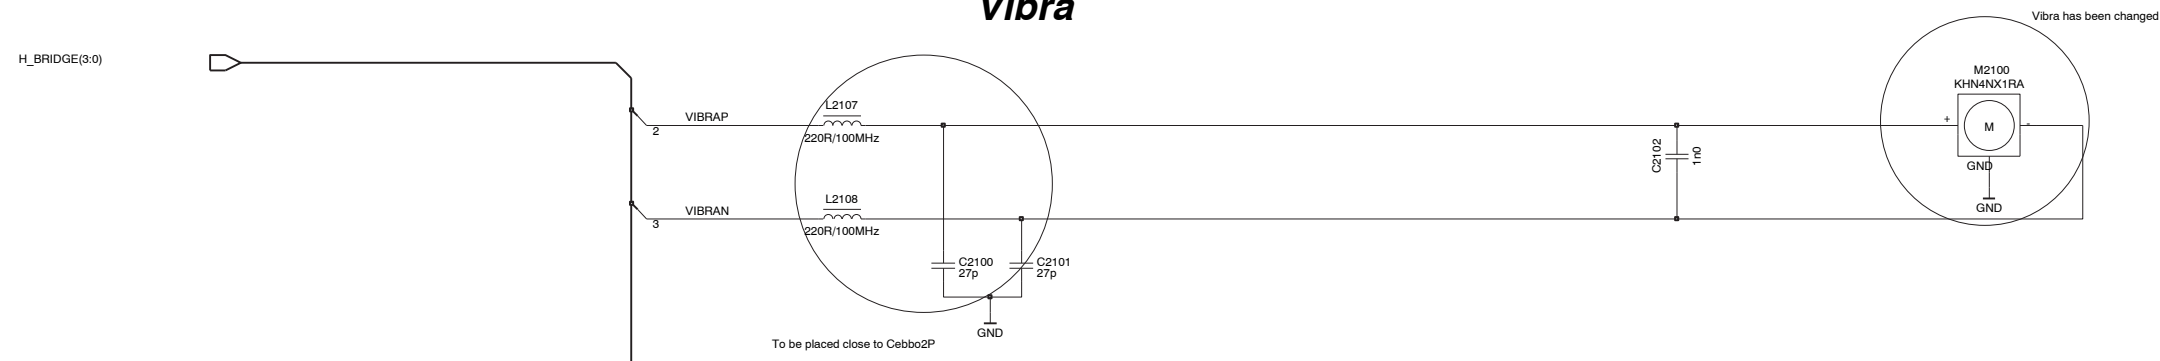



IHF

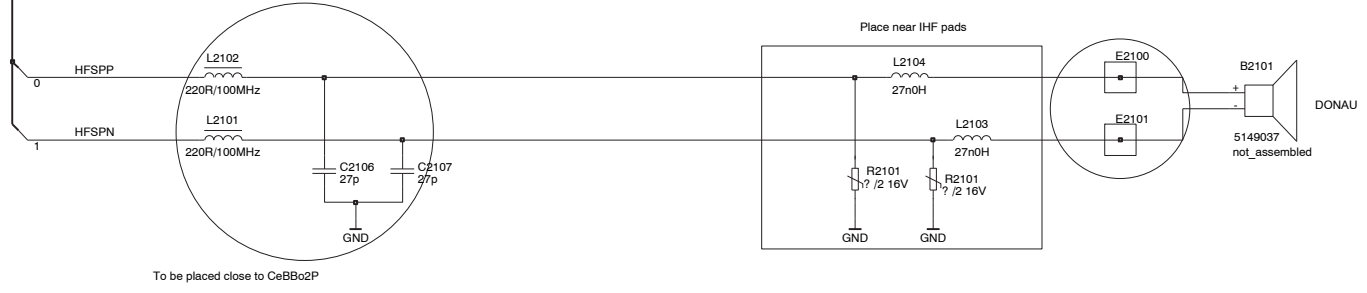


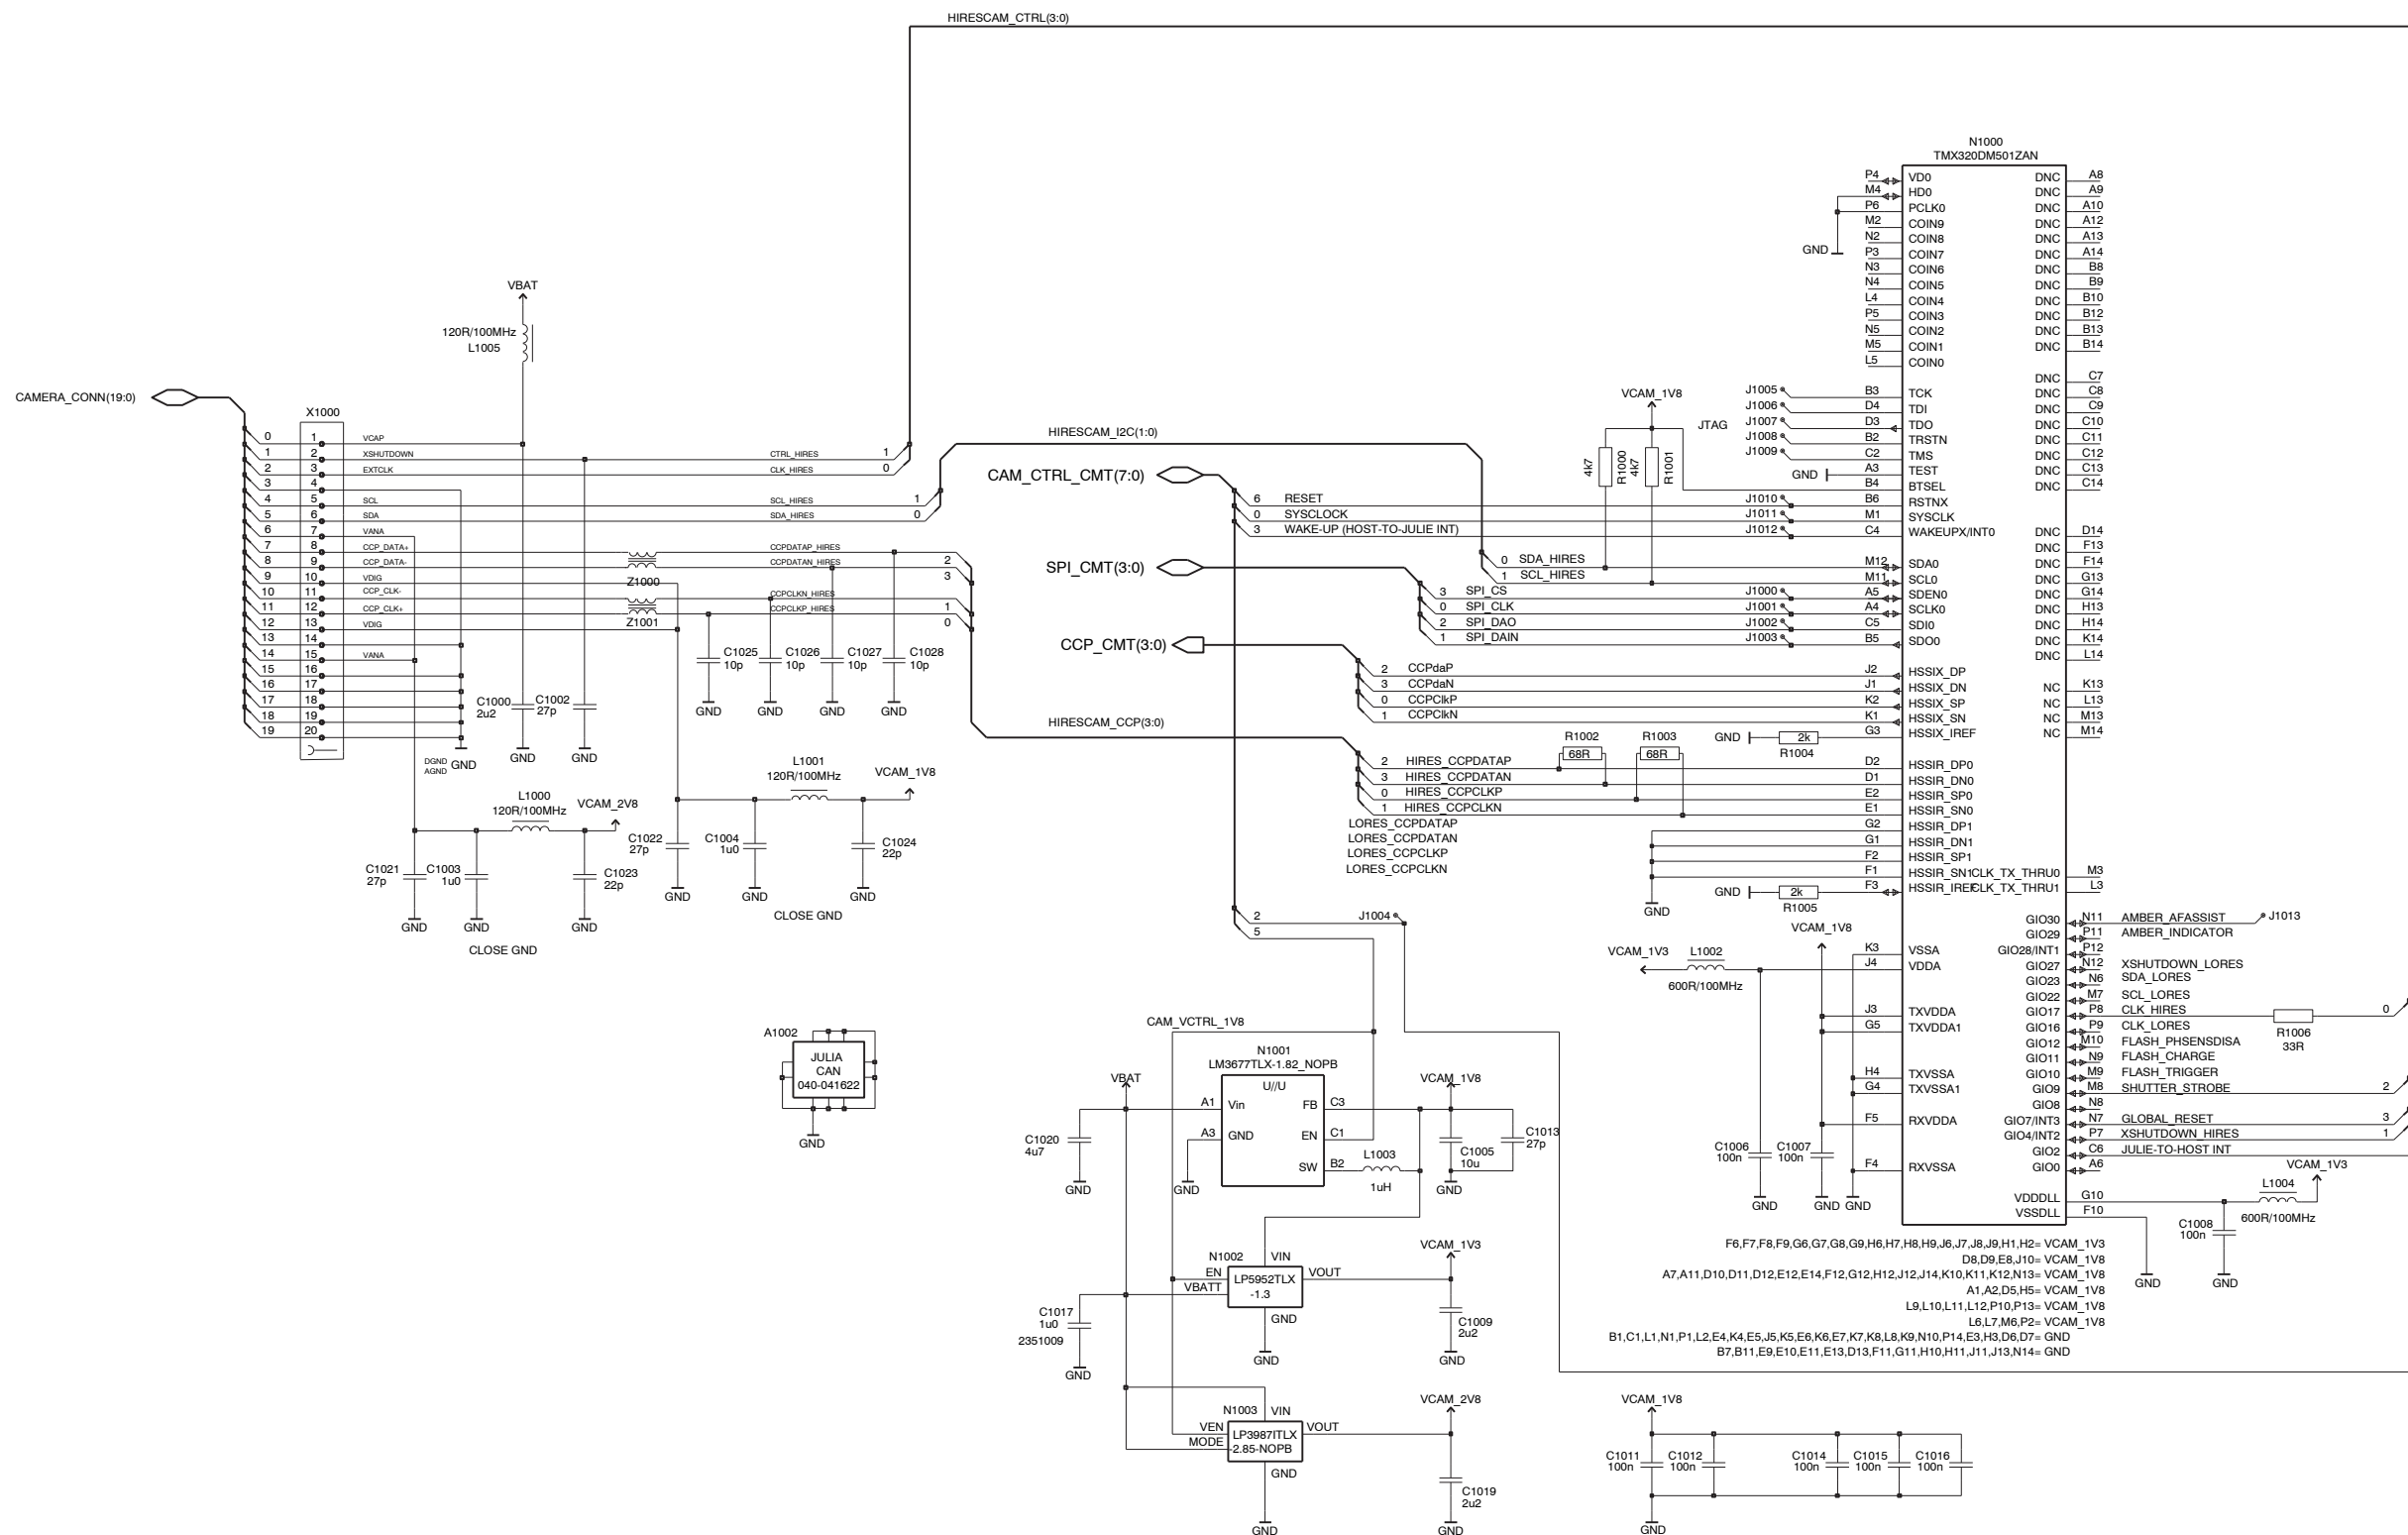


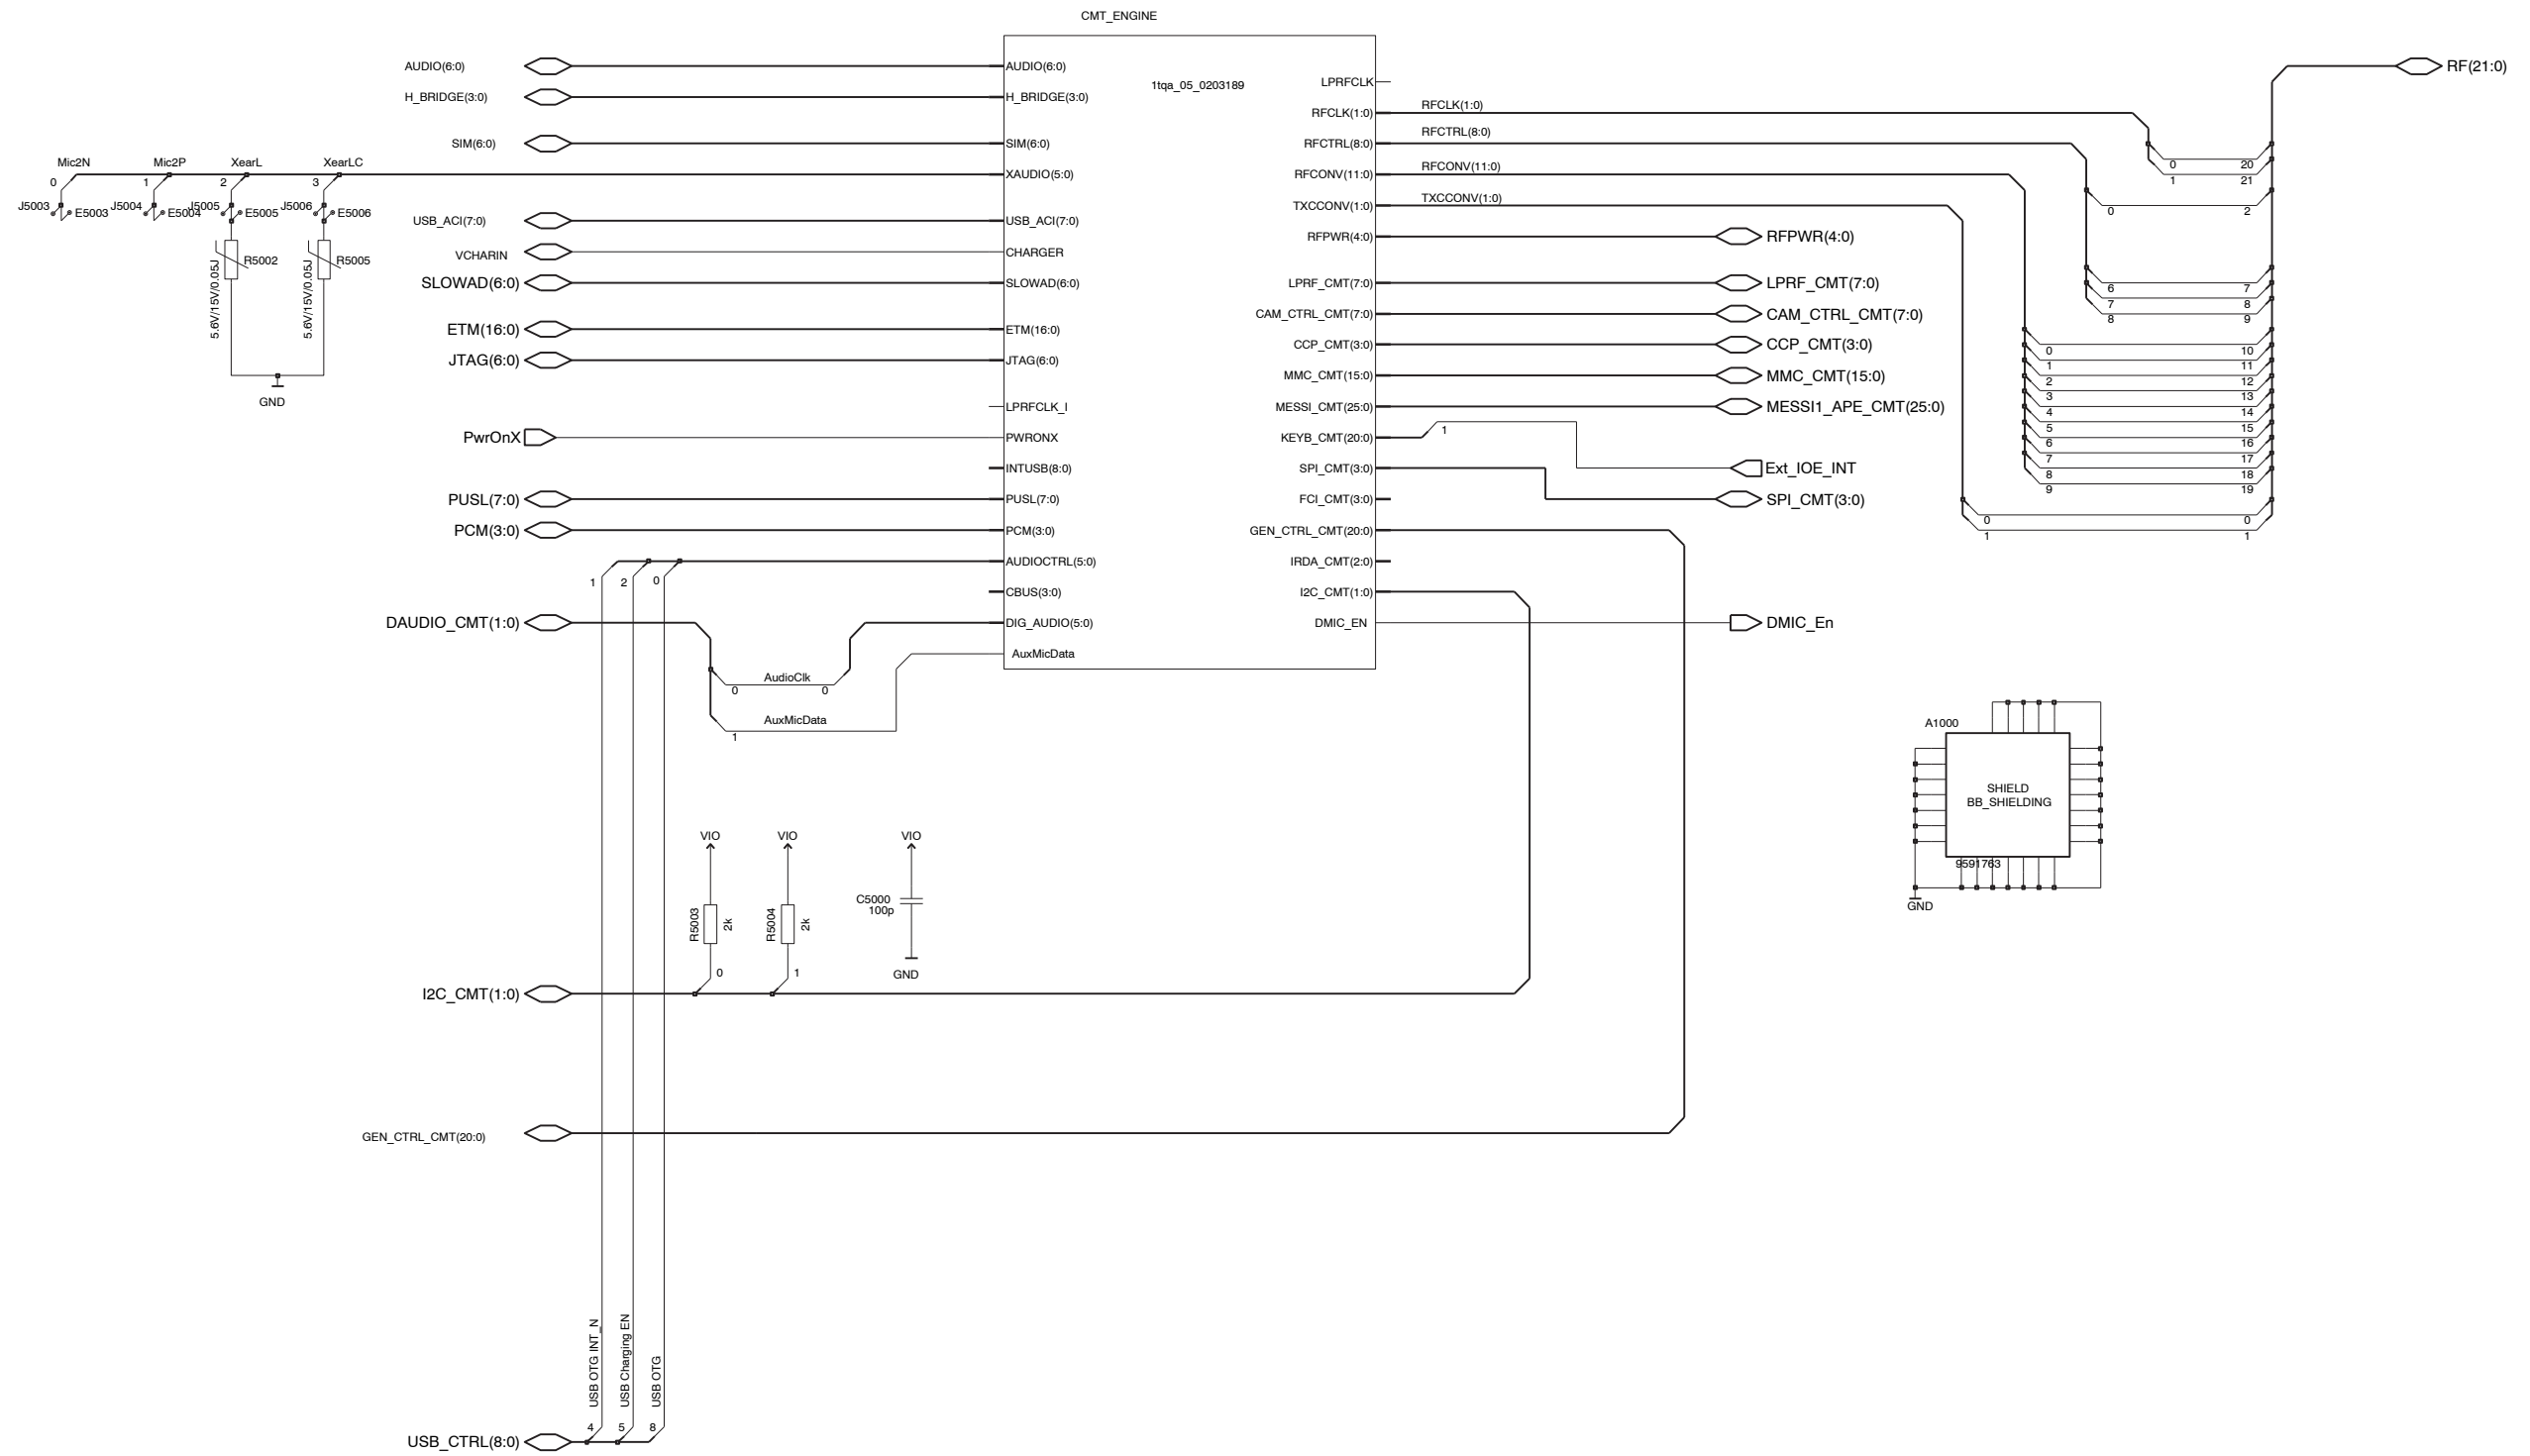



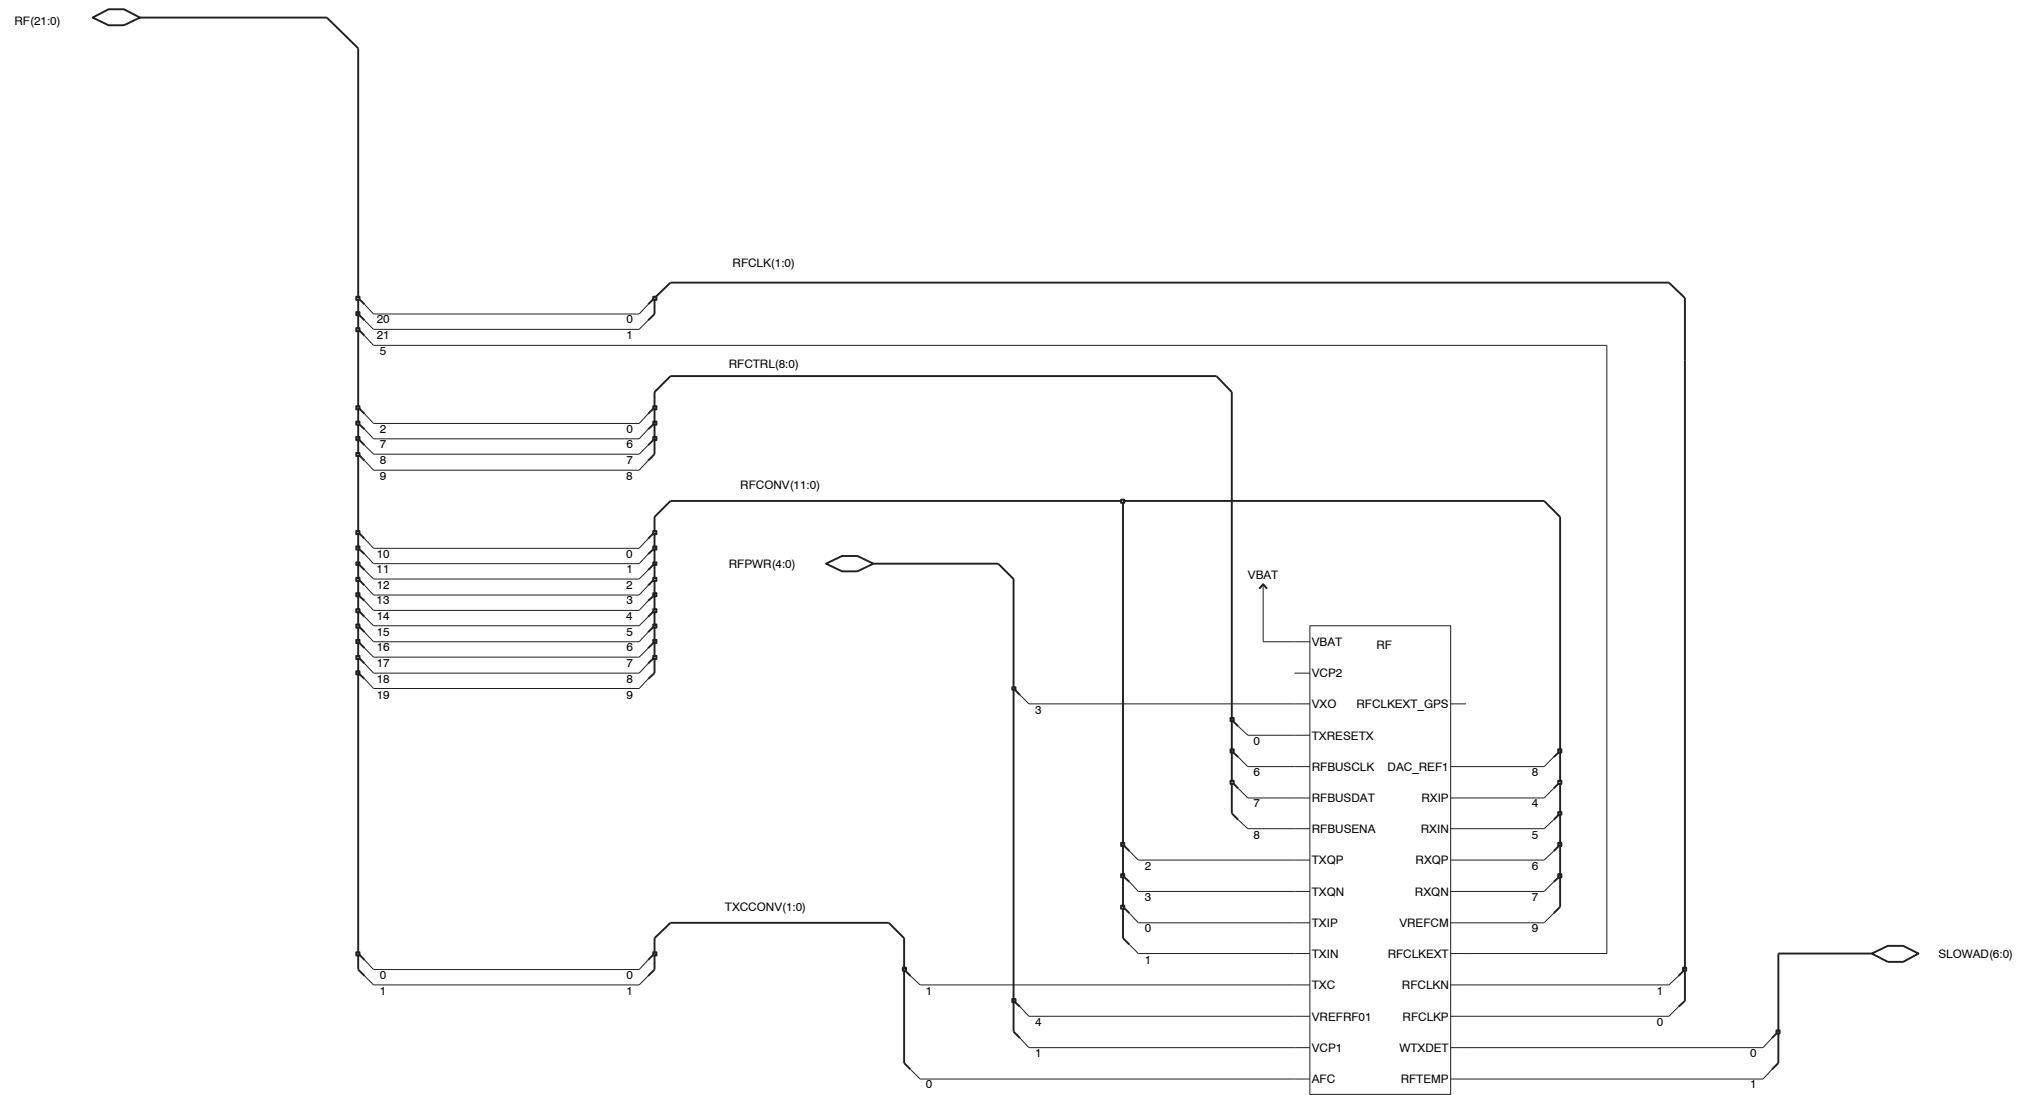


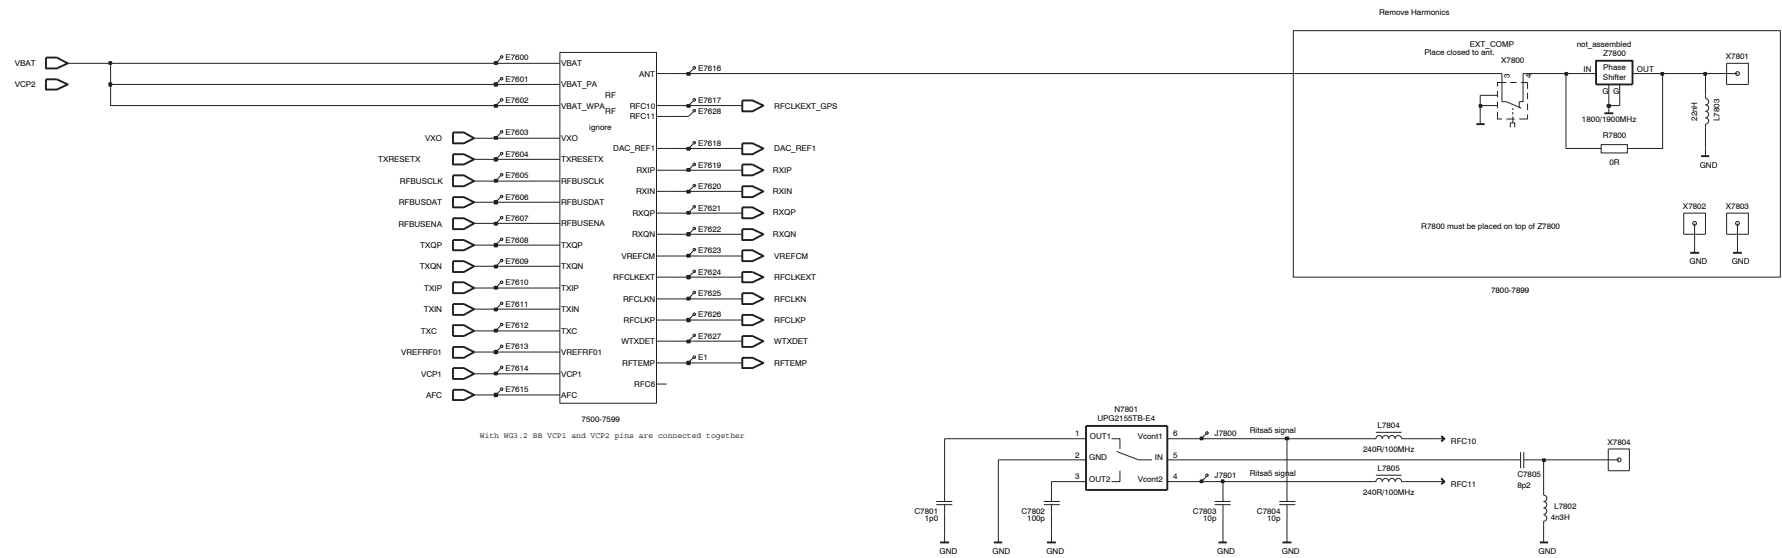


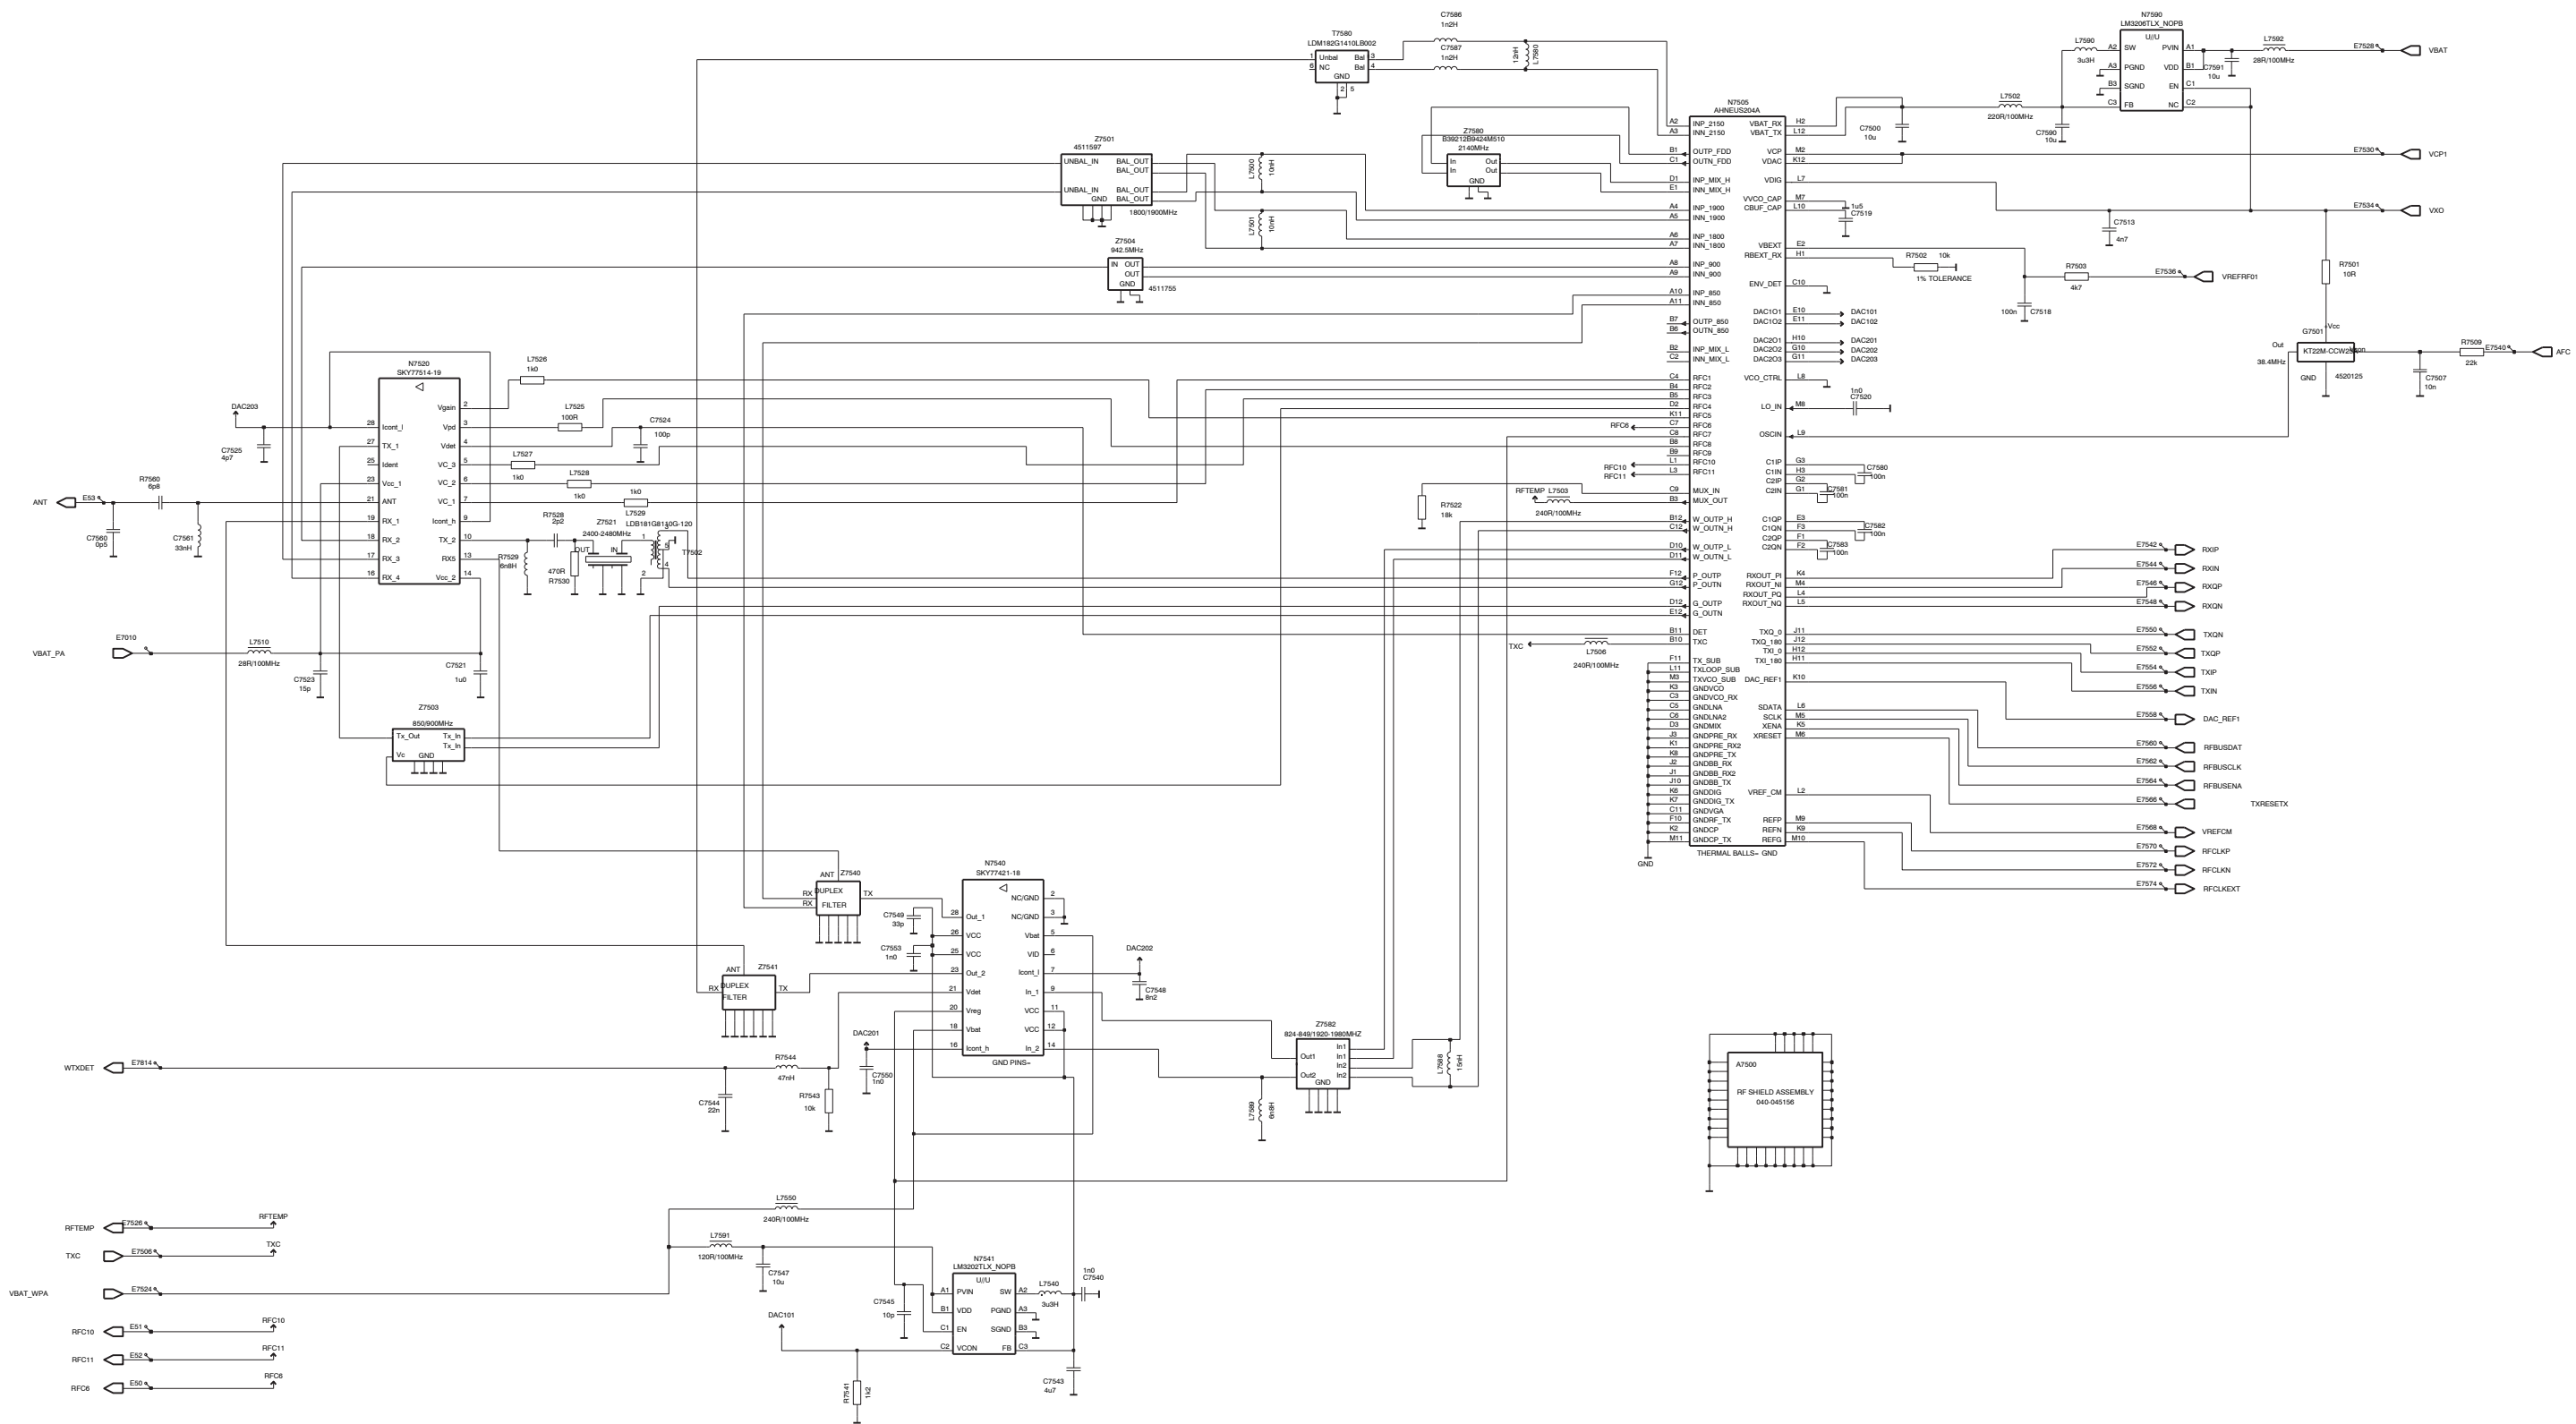


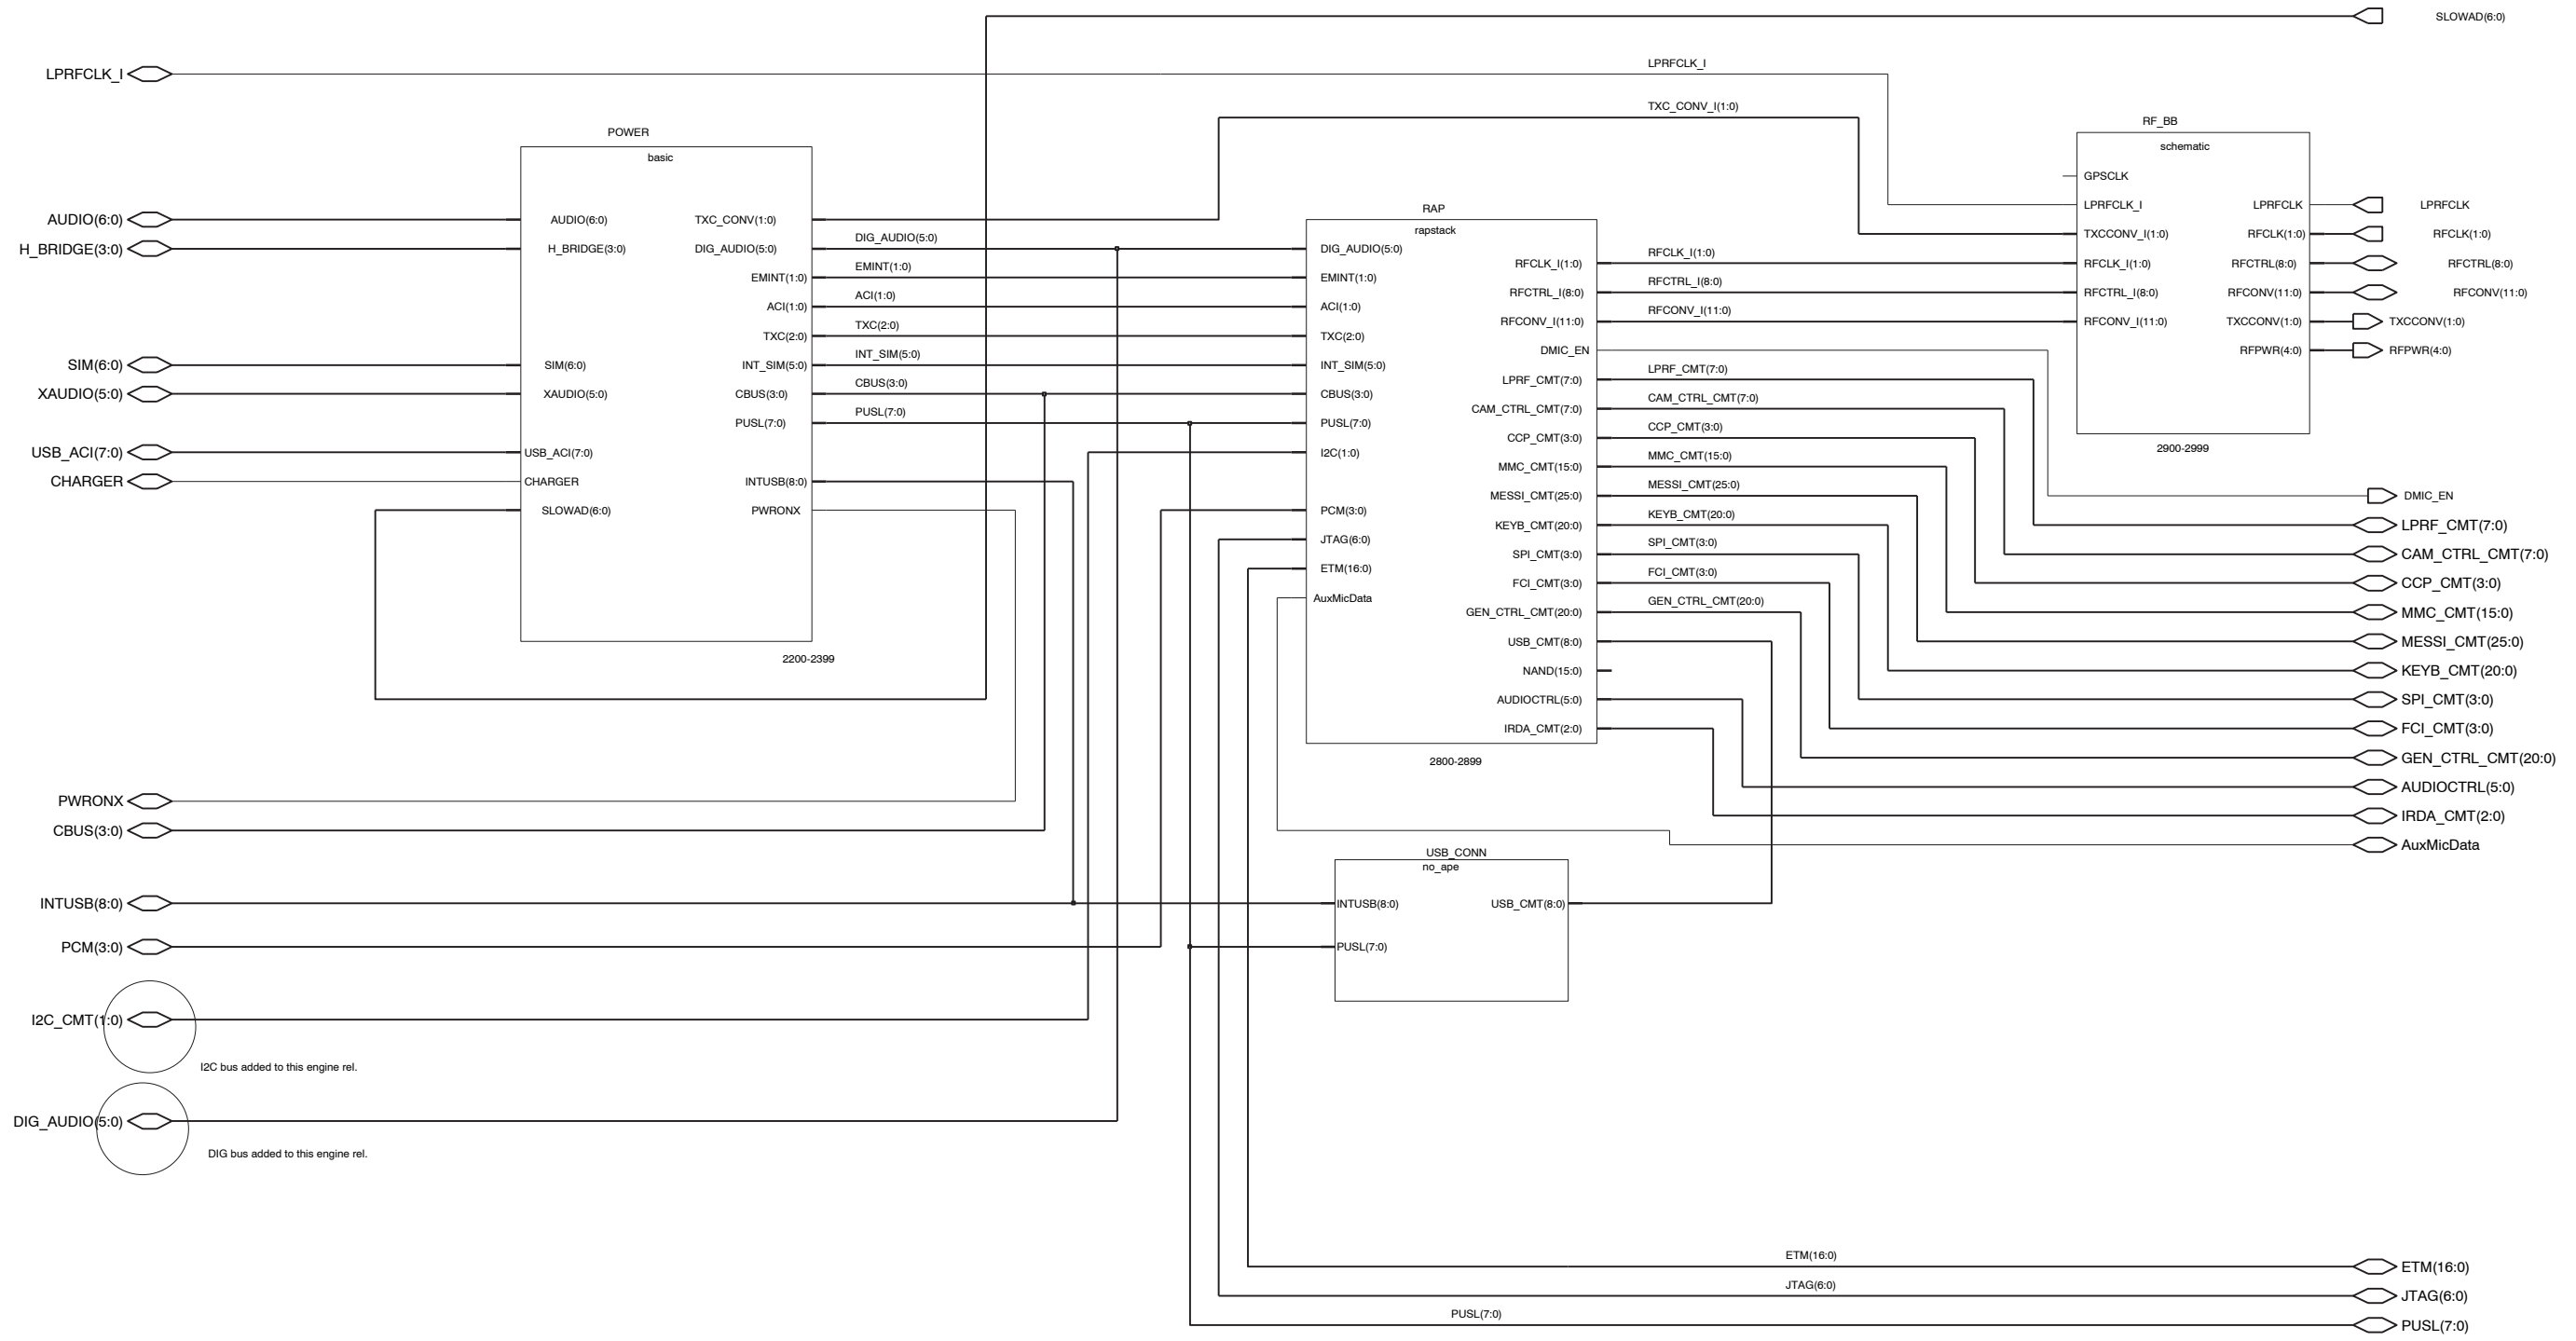


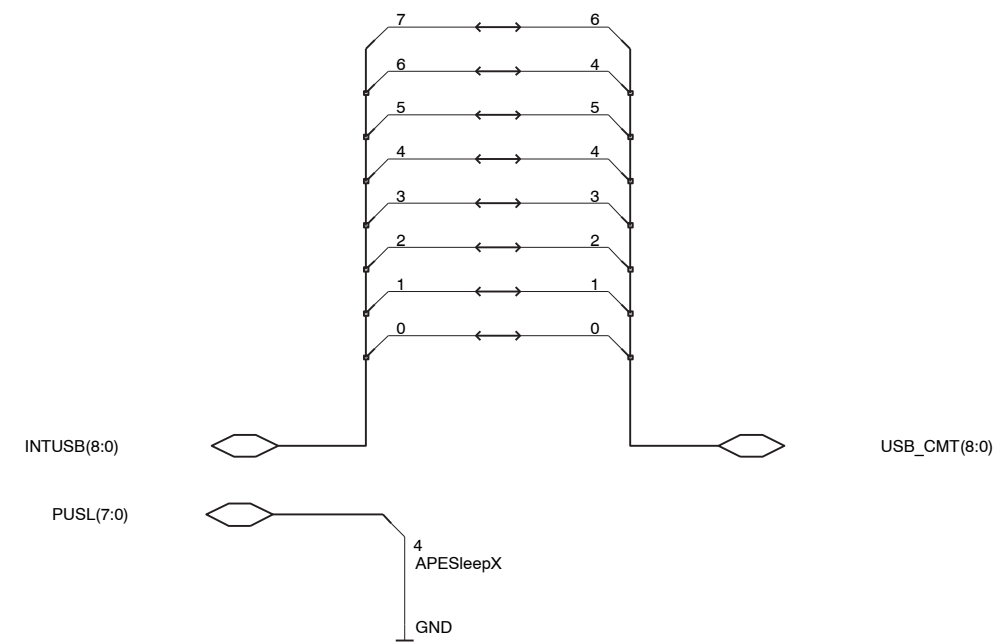


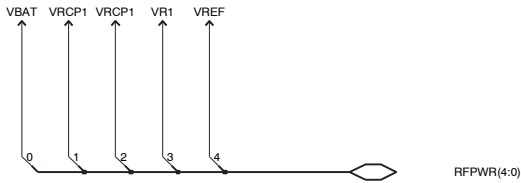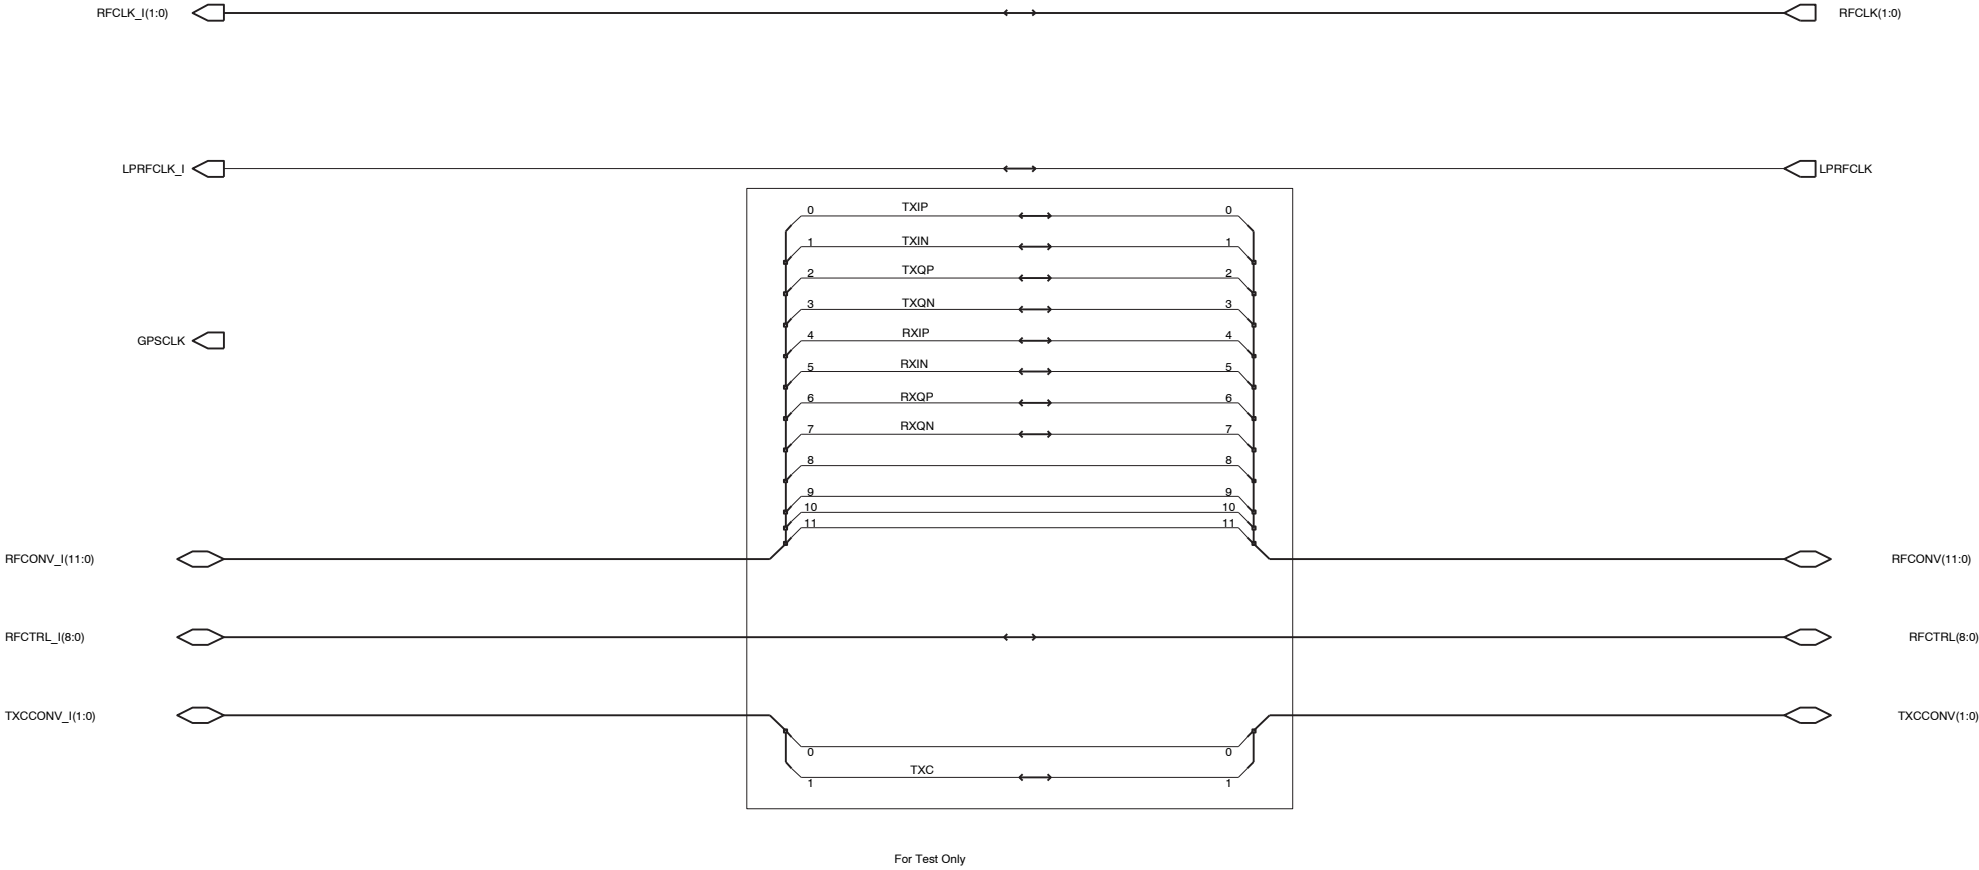


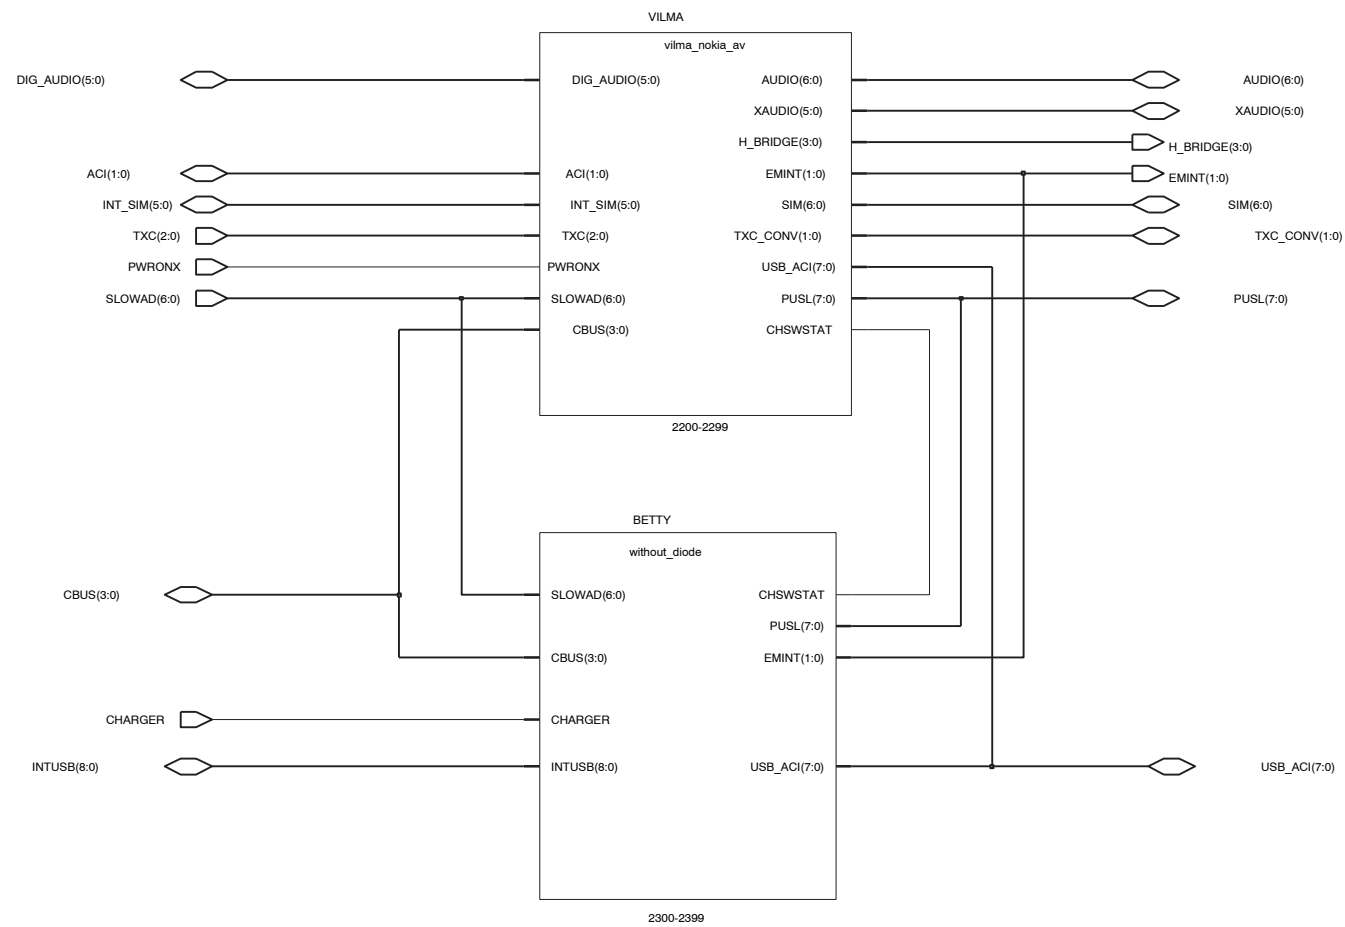


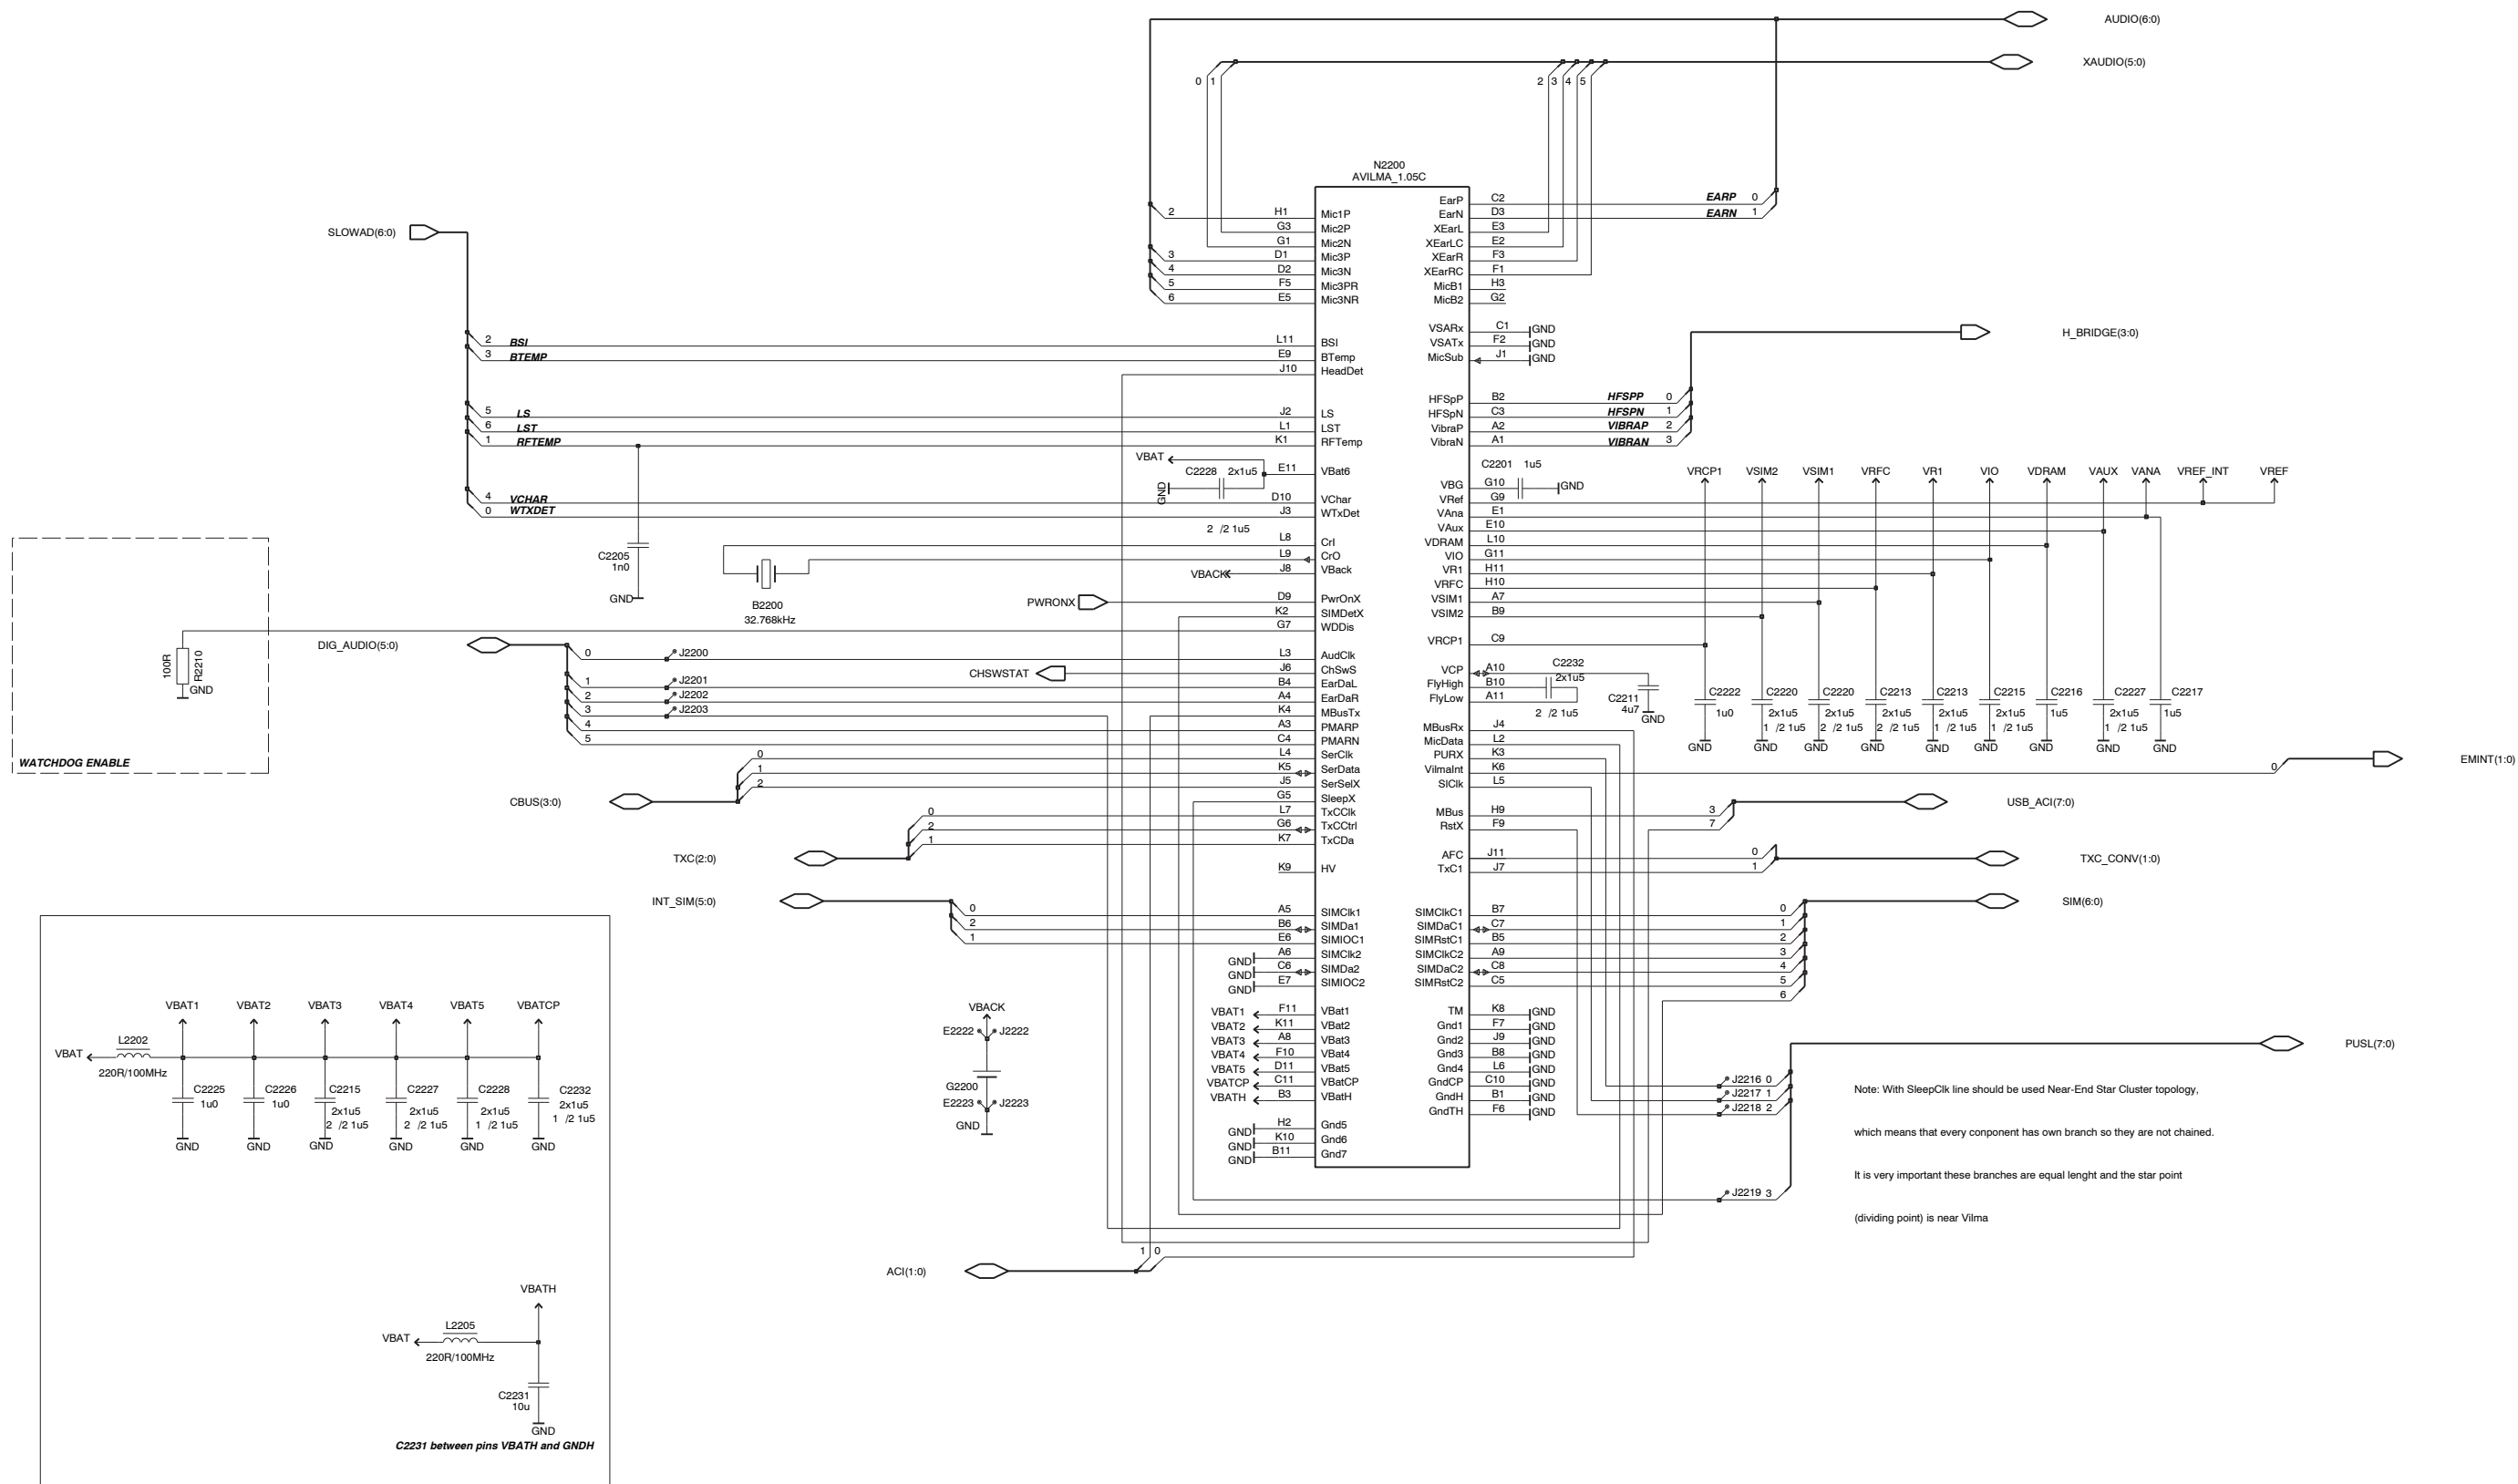


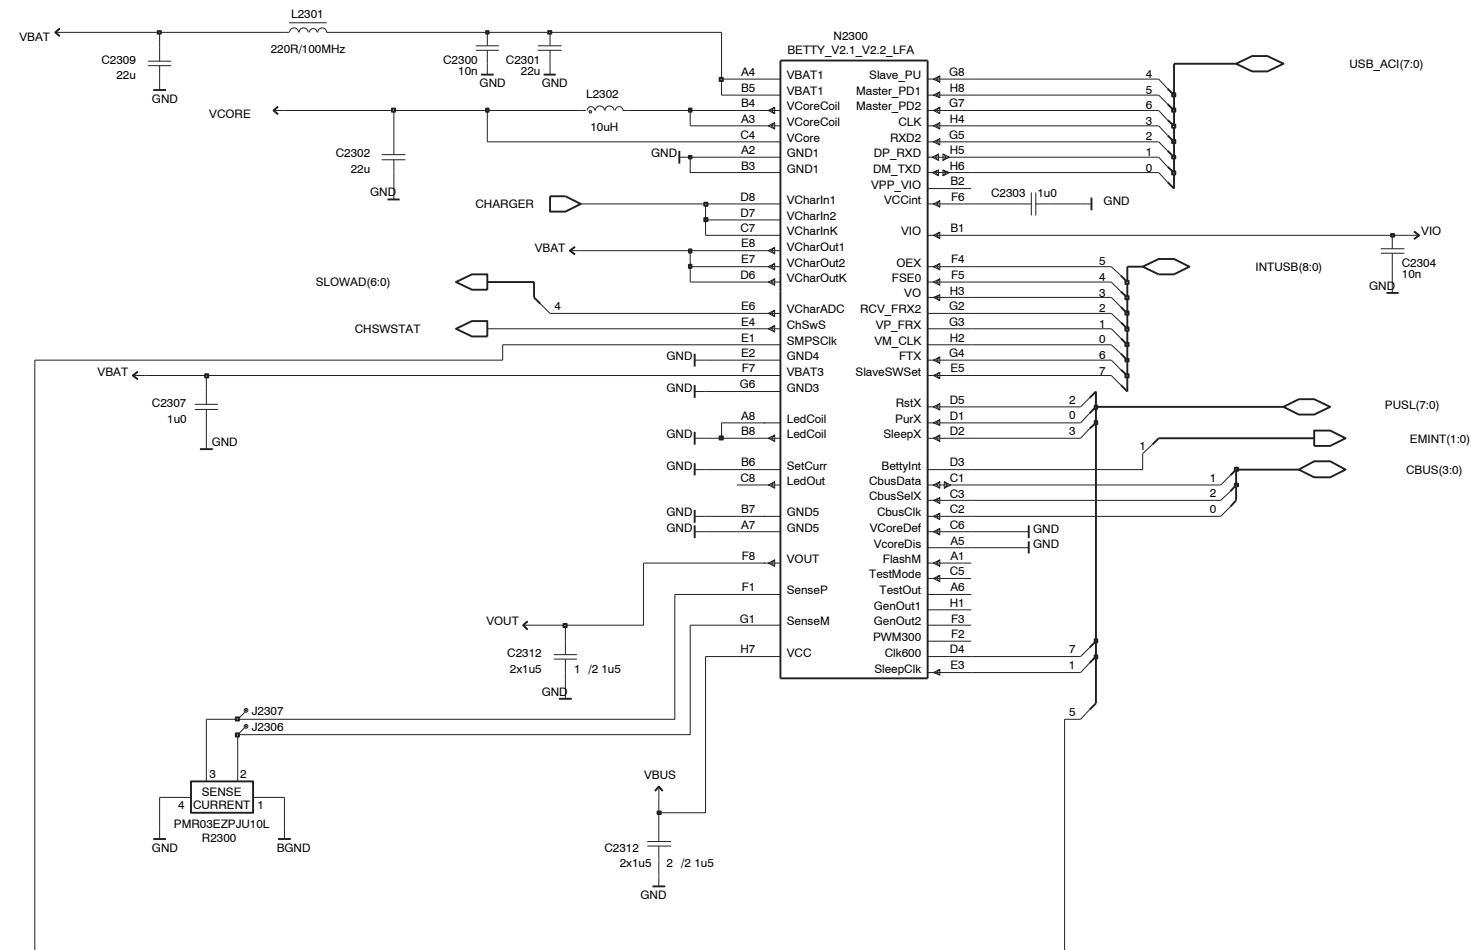


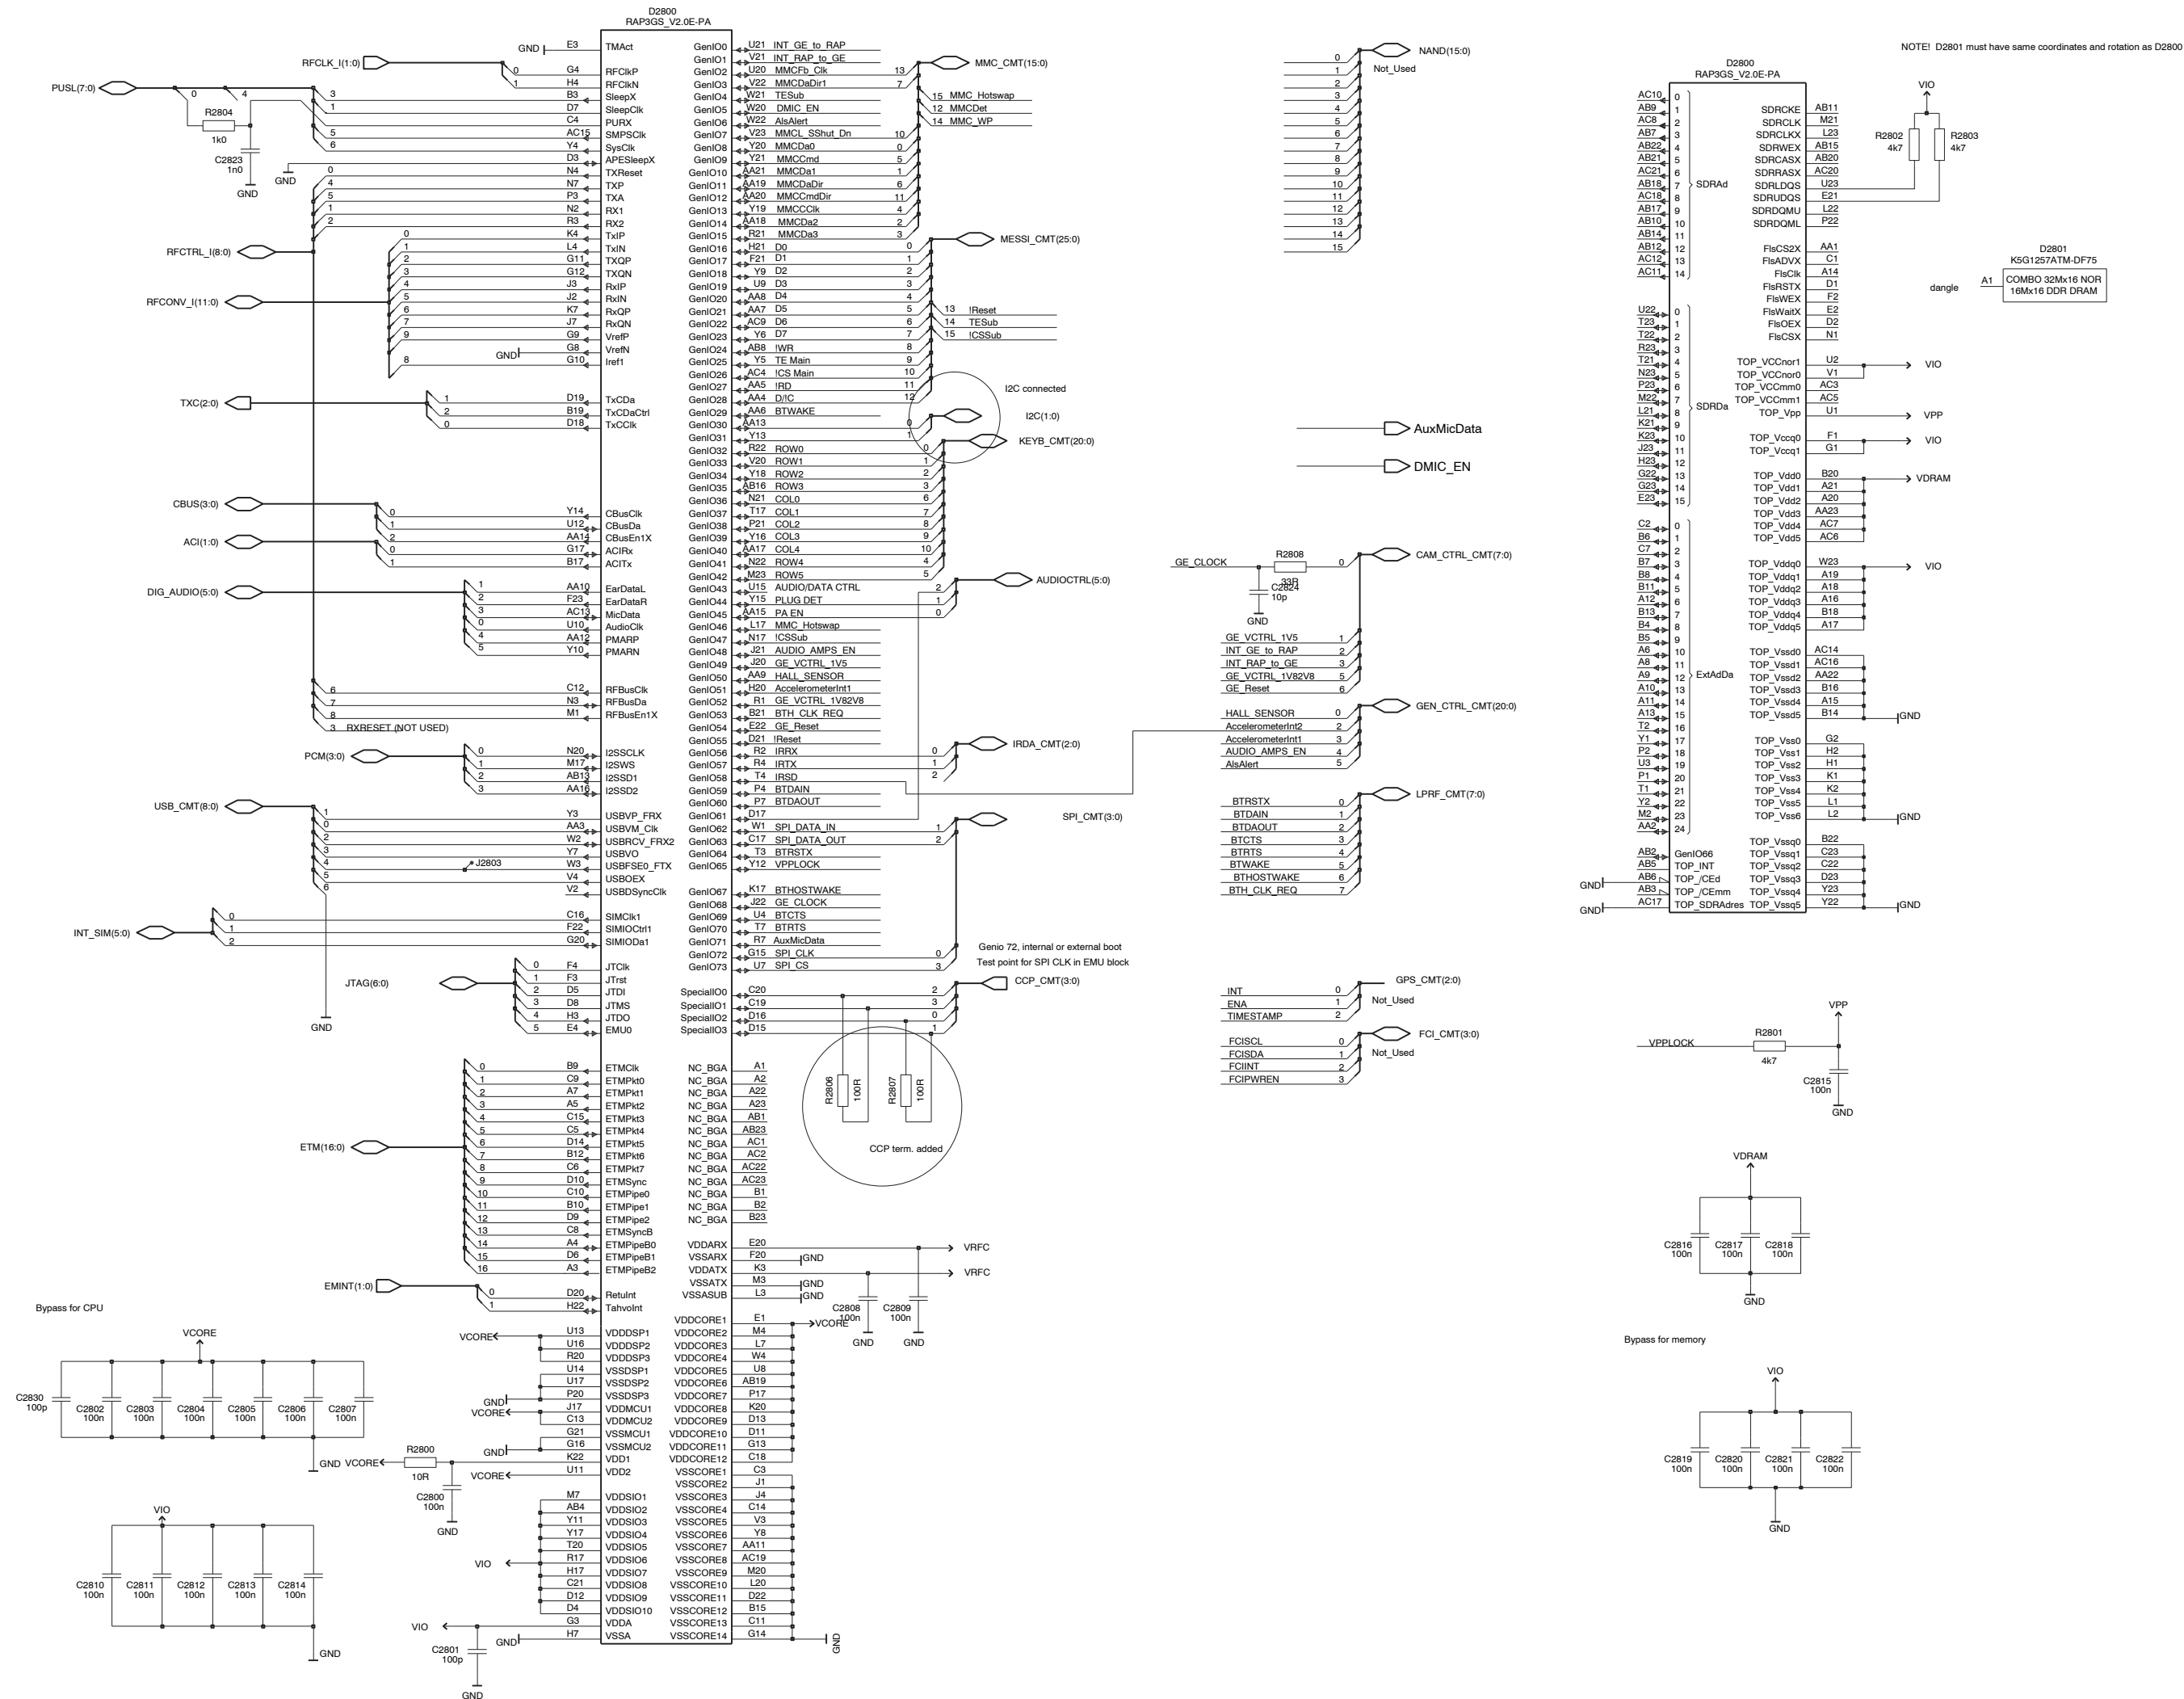

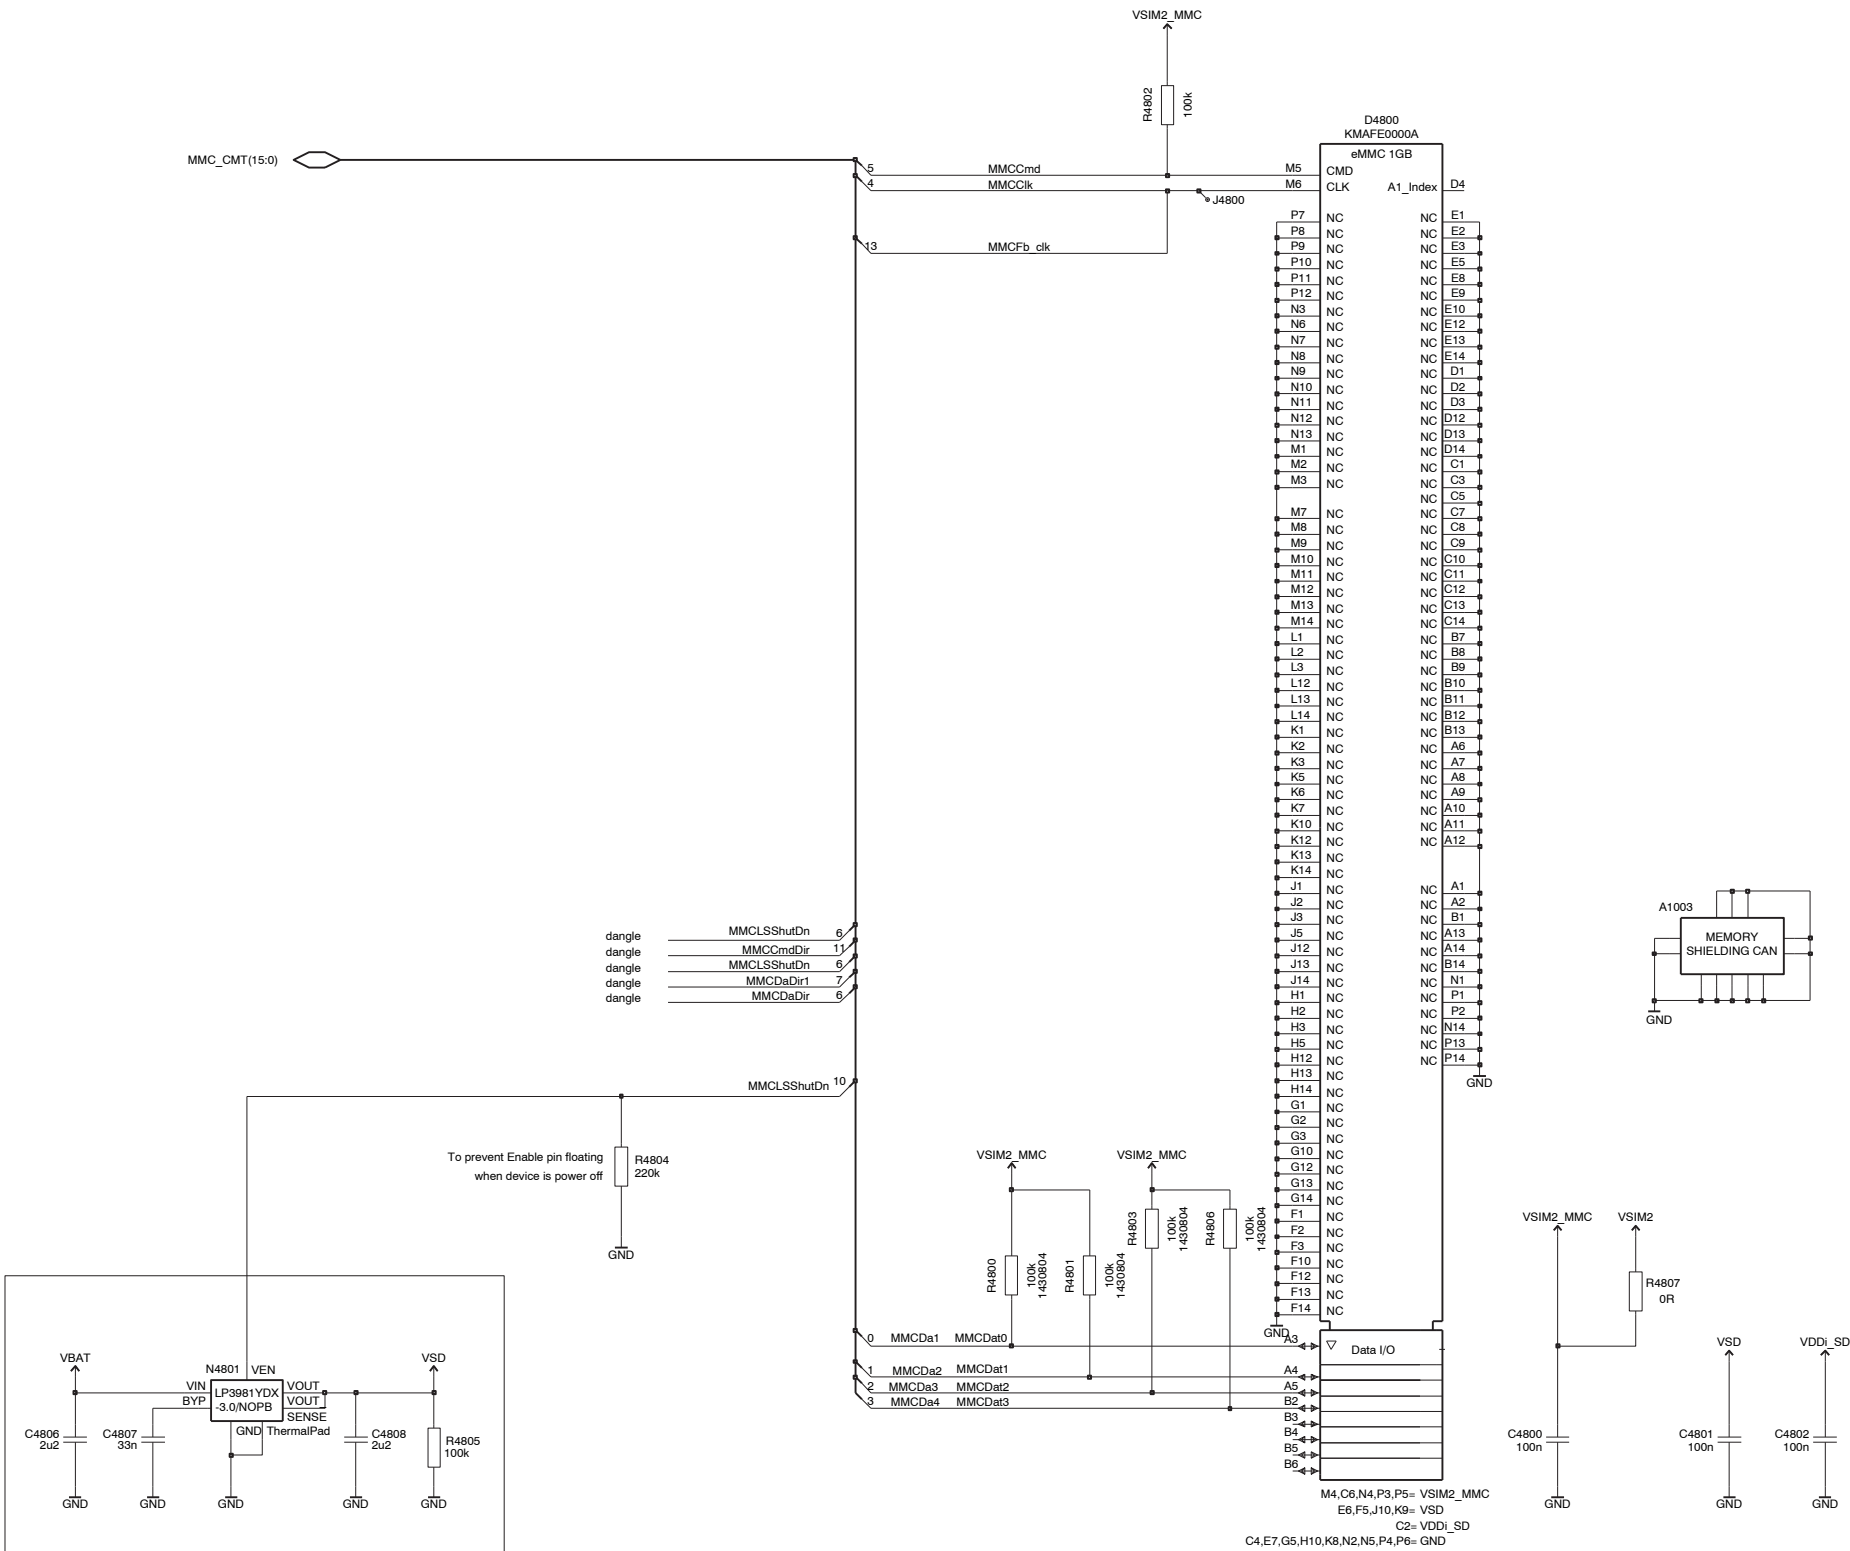

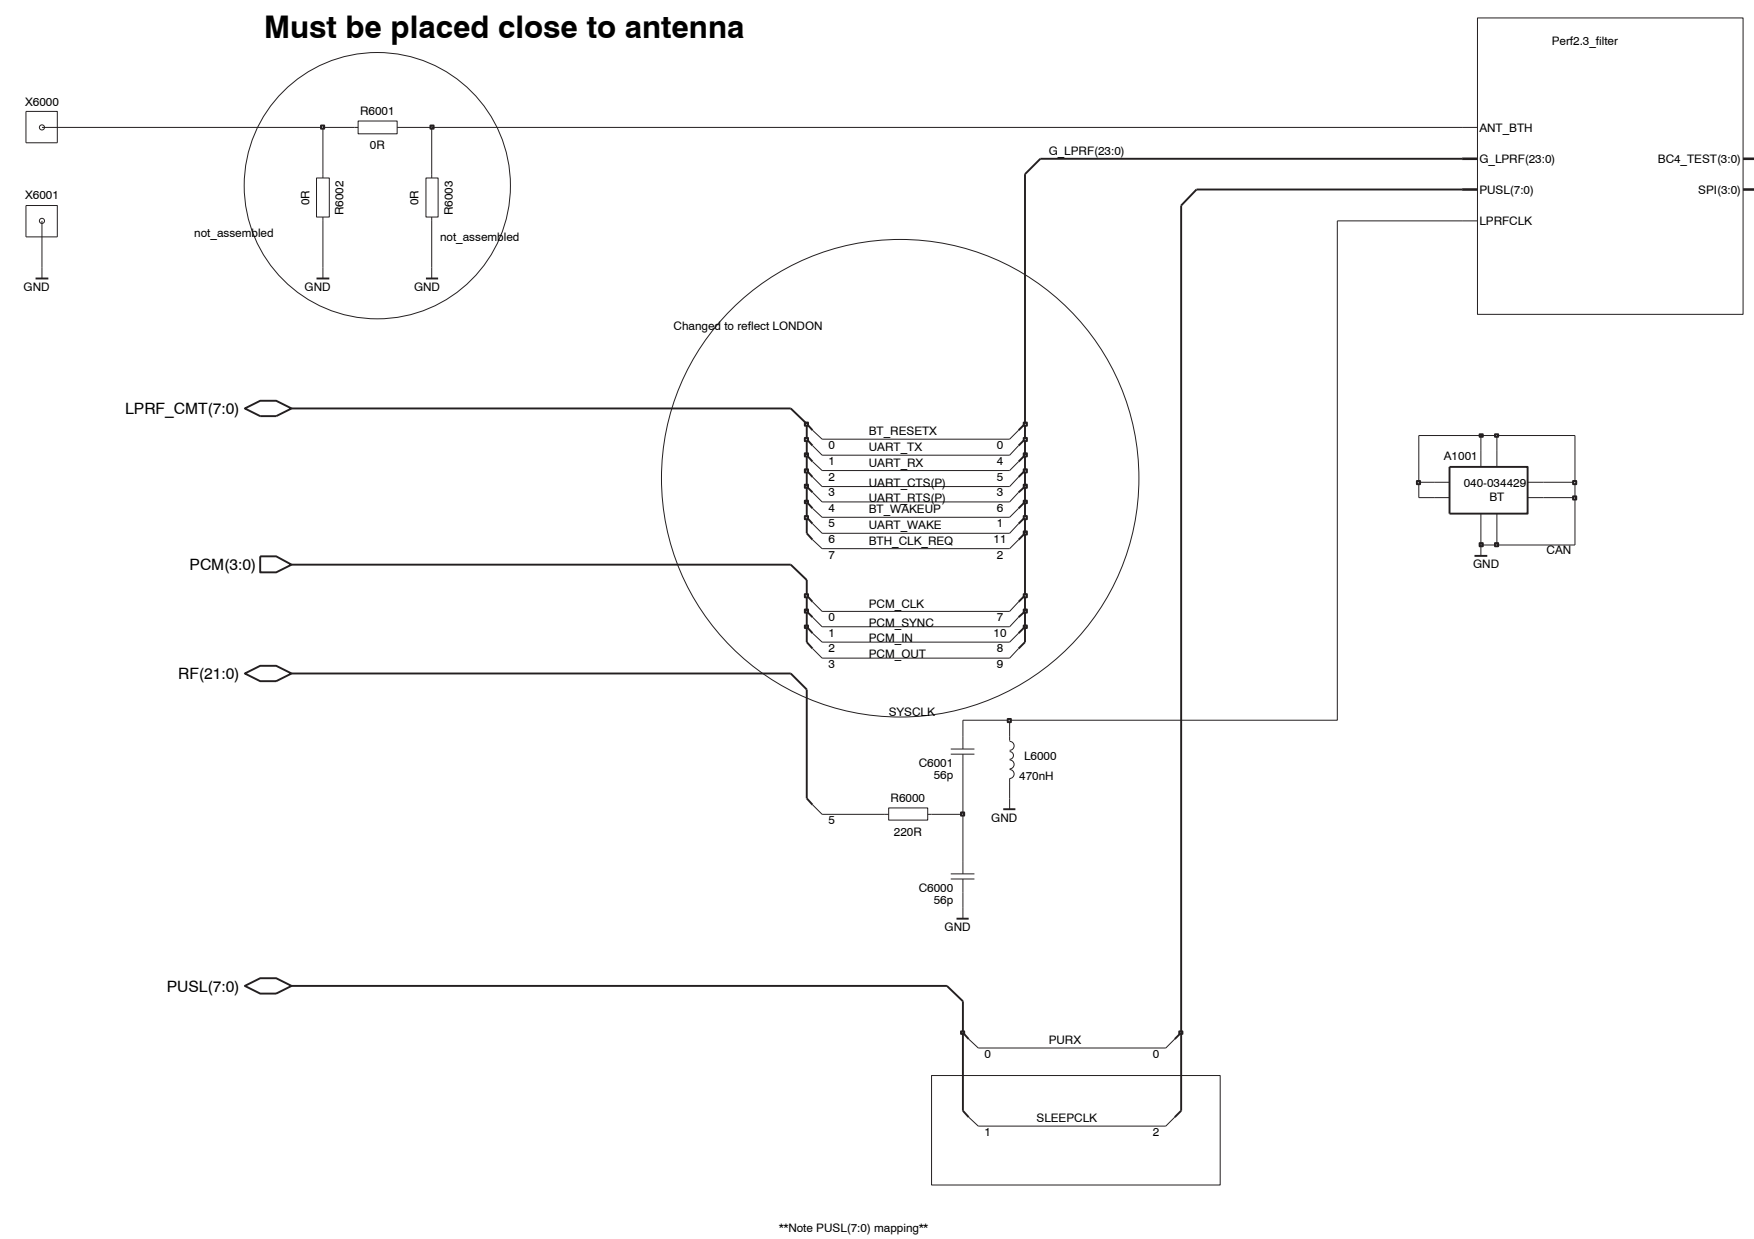

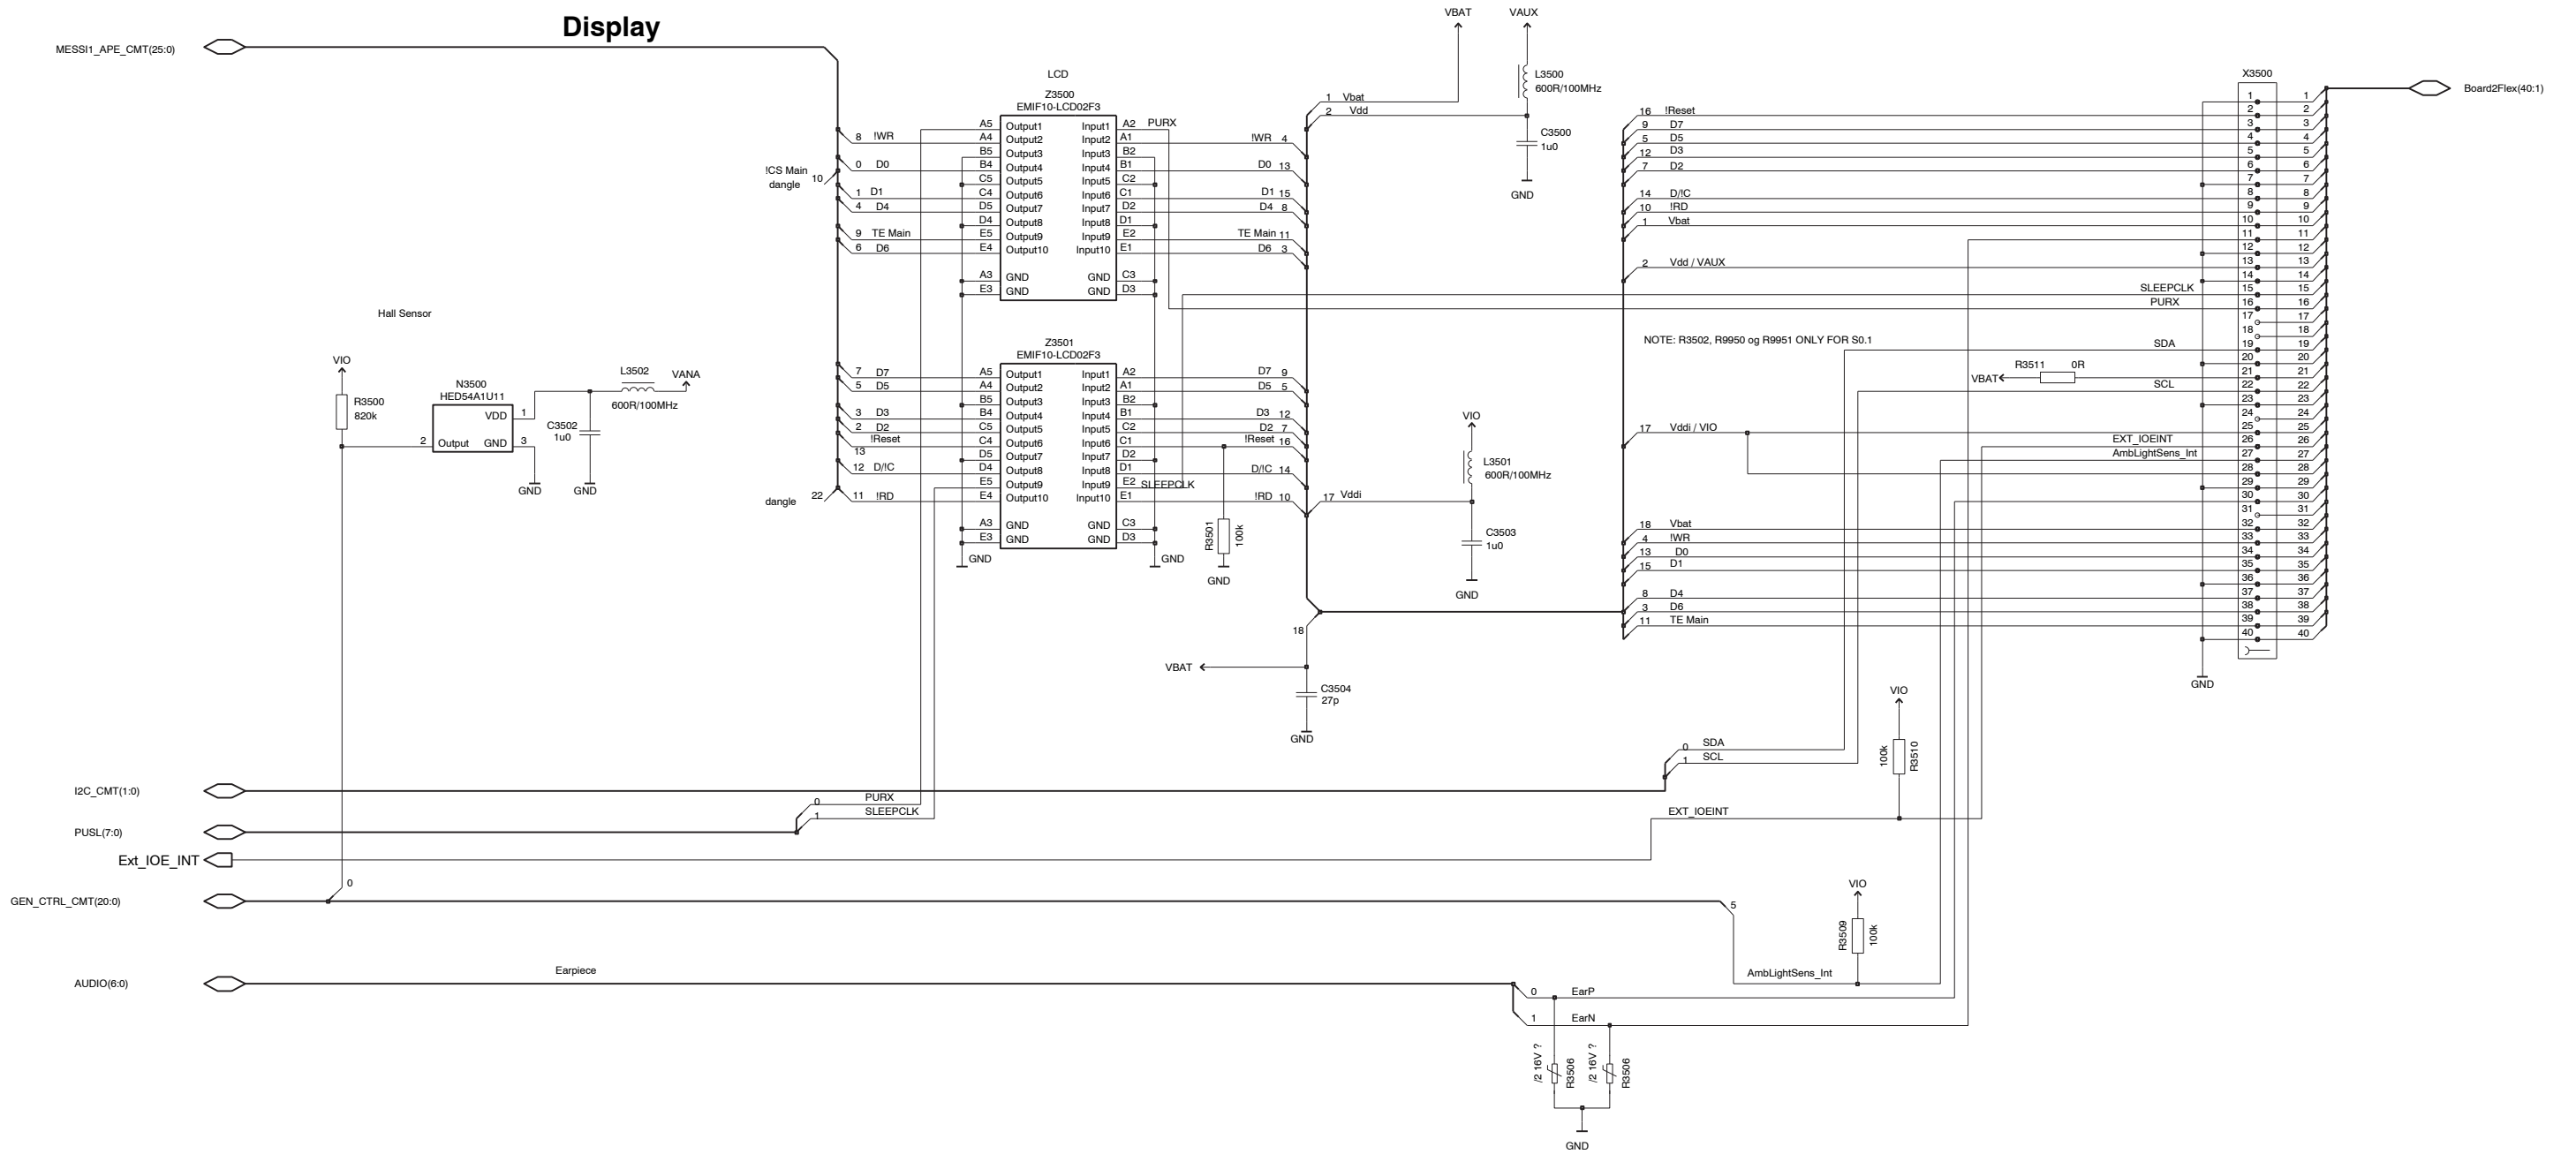

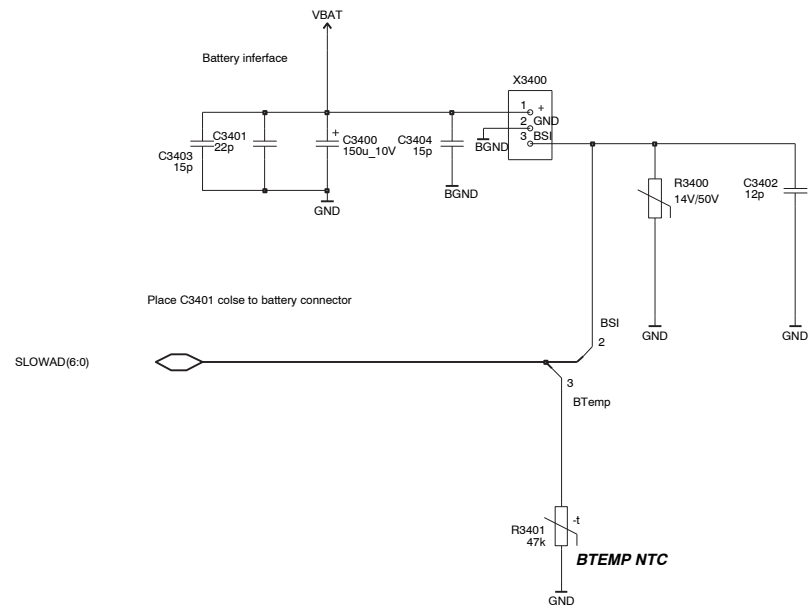

**NOTE !! R3400 IS NEEDED IF VILMA IS FAR FROM BATTERY CONNECTOR !!!
PLACE R3401 NEAR BATTERY CONNECTOR !!!**

